

Hybrid Inverter User Manual



contents

contents

1	Notes on this Manual	1
1.1	Scope of Validity	1
1.2	Target Group	1
1.3	Symbols Used	1
2	Safety	2
2.1	Important Safety Instructions	2
2.2	Notes on this Manual Explanation of Symbol	2
2.3	CE Directives	7
3	Introduction	8
3.1	Basic features	8
3.2	Work Modes	10
3.3	Dimension	11
3.4	Terminals of Hybrid inverter	12
4.	Technical Data	14
5.	Installation	17
5.1	Check for Physical Damage	17
5.2	Packing List	17
5.3	Mounting	17
6.	Electrical Connection	21
6.1	PV connection	21
6.2	Grid Connection	21
6.3	EPS Connection (apply to I Version and E Version only)	25
6.4	Battery Connection	29
6.5	CT Connection and Phase instruction	29
6.6	DRM Connection (Function temporarily retained)	33
6.7	WiFi Connection(optional)	33
6.8	GPRS Connection(optional)	35
6.9	Inverter Manipulation	34
7.	Setting	37
7.1	Control Panel	37
7.2	Instructions for LED Indicator	38
7.3	Instructions for the use of three modes	39
8.	LCD Operation	39
8.1	LCD Interface	41
8.2	Setting	45
8.3	INQUIRE	55
8.4	STATISTIC	57
9.	Fault diagnosis and solutions	58

1 Notes on this Manual

1.1 Scope of Validity

This manual is an integral part of REVO series hybrid inverter, It describes the assembly, installation, commissioning, maintenance and failure of the product. Please read it carefully before operating.

R6KH3	R8KH3	R10KH3	R12KH3
R15KH3			

Naming rules , For example:R8KH3

“R” means “REVO series”.

“8k” means “output power 8kW ”.

“H” means “Battery High Voltage”.

“3” means “Output three-phase (3)”.


Store this manual where it will be accessible at all times.


1.2 Target Group


This manual is for qualified electricians. The tasks described in this manual only can be performed by qualified electricians.


1.3 Symbols Used

The following types of safety instructions and general information appear in this document as described below:

	<p>Danger!</p> <p>“Danger” indicates a hazardous situation which, if not avoided, will result in death or serious injury.</p>
---	--

	<p>Warning!</p> <p>“Warning” indicates a hazardous situation which, if not avoided, could result in death or serious injury.</p>
---	---


	<p>Caution !</p> <p>“Caution” indicates a hazardous situation which, if not avoided, could result in minor or moderate</p>
---	---

	<p>Note !</p> <p>“ Note” provides tips that are valuable for the optimal operation of our product.</p>
---	---

2 Safety


2.1 Important Safety Instructions

Danger!
Danger to life due to high voltages in the inverter ! All work must be carried out by qualified electrician




The appliance is not to be used by children or persons with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.


Caution!
Danger of burn injuries due to hot enclosure parts!
During operation, the upper of the enclosure and the enclosure body may become hot.
Only touch the lower enclosure lid during operation.



Caution!
Possible damage to health as a result of the of radiation!
Do not stay closer than 20 cm to inverter for any length of time.




Note!
Grounding the PV generator.




Comply with the local requirements for grounding the PV modules and the PV generator. It is recommends connecting the generator frame and other electrically conductive surfaces in a manner which ensures continuous conduction and ground these in order to have optimal protection of system and persons.


Warning!
Ensure input DC voltage \leq Max. DC voltage .Over voltage may cause permanent damage to inverter or other losses, which will not be included in warranty!



Warning!
Authorized service personnel must disconnect both AC and DC power from inverter before attempting any maintenance or cleaning or working on any circuits connected to inverter.



Warning!
Do not operate the inverter when the device is running.



Safety



Warning!
Risk of electric shock!

- Prior to the application, please read this section carefully to ensure correct and safe application. Please keep the user manual properly.
- Accessories only together with the inverter shipment are recommend here .other- wise may result in a risk of fire, electric shock, or injury to person.
- Make sure that existing wiring is in good condition and that wire is not undersized.
- Do not disassemble any parts of inverter which are not mentioned in installation guide. It contains no user-serviceable parts. See Warranty for instructions on obtaining service. Attempting to service the inverter yourself may result in a risk of electric shock or fire and will void your warranty.
- Keep away from flammable, explosive materials to avoid fire disaster.
- The installation place should be away from humid or corrosive substance.
- Authorized service personnel must use insulated tools when installing or working with this equipment.
- PV modules shall have an IEC 61730 class A rating.
- Never touch either the positive or negative pole of PV connecting device. Strictly prohibit touching both of them at the same time.
- The unit contains capacitors that remain charged to a potentially lethal voltage after the MAINS , battery and PV supply has been disconnected.
- Hazardous voltage will present for up to 5 minutes after disconnection from power supply.
- CAUTION-RISK of electric shock from energy stored in capacitor, Never operate on the inverter couplers, the MAINS cables, Battery cables, PV cables or the PV generator when power is applied. After switching off the PV , battery and Mains, always wait for 5minutes to let the intermediate circuit capacitors discharge before unplug DC ,battery plug and MAINS couplers.
- When accessing the internal circuit of inverter, it is very important to wait 5 minutes before operating the power circuit or demounting the electrolyte capacitors inside the device. Do not open the device beforehand since the capacitors require time sufficiently discharge!
- Measure the voltage between terminals UDC+ and UDC- with a multi-meter(impedance at least 1Mohm) to ensure that the device is discharged before beginning work (35VDC) inside the device.

Surge protection devices (SPDs) for PV installation



Warning!
Over-voltage protection with surge arresters should be provided when the PV power system is installed.
The grid connected inverter is not fitted with SPDs in both PV input side and MAINS side.

Lightning will cause a damage either from a direct strike or from surges due to a nearby

Safety

strike.

- Induced surges are the most likely cause of lightning damage in majority of installations, especially in rural areas where electricity is usually provided by long overhead lines. Surge may be included on both the PV array conduction and the AC cables leading to the building.
- Specialists in lightning protection should be consulted during the end use application.
- Using appropriate external lightning protection, the effect of a direct lightning strike into a building can be mitigated in a controlled way, and the lightning current can be discharged into the ground.
- Installation of SPDs to protect the inverter against mechanical damage and excessive stress include a surge arrester in case of a building with external lightning protection system (LPS) when separation distance is kept.
- To protect the DC system, surge suppression device (SPD type2) should be fitted at the inverter end of the DC cabling and at the array located between the inverter and the PV generator, if the voltage protection level (VP) of the surge arresters is greater than 1100V, an additional SPD type 3 required for surge protection for electrical devices.
- To protect the AC system, surge suppression devices (SPD type2) should be fitted at the main incoming point of AC supply (at the consumer's cutout), located between the inverter and the meter/distribution system; SPD (test impulse D1) for signal in according I to EN 61632-1.
- All DC cables should be installed to provide as short a run as possible, and positive and negative cables of the string or main DC supply should be bundled together. Avoiding the creation of loops in the system.
- Spark gap devices are not suitable to be used in DC circuits once conducting, they won't stop conducting until the voltage across their terminals is typically more than 30 volts.

Anti-Islanding Effect

- Islanding effect is a special phenomenon that grid-connected PV system still supply power to the nearby grid when the voltage loss is happened in the power system. It is dangerous for maintenance personnel and the public. Revo-Hybrid series inverter provide Active Frequency Drift(AFD) to prevent islanding effect.

PE Connection and Leakage Current

- The end-use application shall monitor the protective conductor by residual current operated protective device (RCD) with rated fault current $I_{fn} \leq 240\text{mA}$ which automatically disconnects the device in case of a fault.

The device is intended to connect to a PV generator with a capacitance limit of about 700nf.



- Incorrect grounding can cause physical injury, death or equipment malfunction and increase electromagnetic.
- Make sure that grounding conductor is adequately sized as required by safety

Safety

regulations.

- Do not connect the ground terminals of the unit in series in case of a multiple installation. This product can cause current with a DC component, Where a residual current operated protective (RCD) or monitoring (RCM) device is used for protection in case of direct or indirect contact, only an RCD or RCM of type B is allowed on the supply side of this product.

For United Kingdom

- The installation that connects the equipment to the supply terminals shall comply with the requirements of BS 7671.
- Electrical installation of PV system shall comply with requirements of BS 7671 and IEC 60364-7-712.
- No protection settings can be altered.
- User shall ensure that equipment is so installed, designed and operated to maintain at all times compliance with the requirements of ESQCR22(1)(a).

For Australia and New Zealand

- Electrical installation and maintenance shall be conducted by licensed electrician and shall comply with Australia National Wiring Rules.

Battery Safety Instructions












- Revo hybrid Series inverter should be worked with high voltage battery, for the specific parameters such as battery type, nominal voltage and nominal capacity etc., please refer to section 4.
- As accumulator batteries may contain potential electric shock and short-circuit current danger, to avoid accidents that might be thus resulted, the following warnings should be observed during battery replacement:
 - 1: Do not wear watches, rings or similar metallic items.
 - 2: Use insulated tools.
 - 3: Put on rubber shoes and gloves.
 - 4: Do not place metallic tools and similar metallic parts on the batteries.
 - 5: Switch off load connected to the batteries before dismantling battery connection terminals.
 - 6: Only personal with proper expertise can carry out the maintenance of accumulator batteries.

Safety

2.2 Notes on this Manual Explanation of Symbol

This section gives an explanation of all the symbols shown on the inverter and on the type label.

Symbols on the Type Label

Symbol	Explanation
	CE mark. The inverter complies with the requirements of the applicable CE
	TUV
	RCM remark.
	SAA certification.
	Beware of hot surface. The inverter can become hot during operation. Avoid contact during operation. Danger of high voltages.
	Danger to life due to high voltages in the inverter!
	Danger. Risk of electric shock!
	Observe enclosed documentation
	The inverter can't be disposed together with the household waste. Disposal information can be found in the enclosed documentation.
	Do not operate this inverter until it is isolated from battery ,mains and on-site PV generation suppliers.
	Danger to life due to high voltage. There is residual voltage existing in the inverter after powering off. which needs 5 min to discharge. Wait 5 min before you open the upper lid or the DC lid.

2.3 CE Directives

This chapter follows the requirements of the European low voltage directives, which contains the safety instructions and conditions of acceptability for the endues system, which you must follow when installing, operating and servicing the unit. If ignored, physical injury or death may follow, or damage may occur to the unit. Read this before you work on the unit. If you are unable to understand the dangers, warnings, cautions or instructions please contact an authorized service dealer before installing. Operating and servicing the unit.

The Grid connected inverter meets the requirement stipulated in Low Voltage Directive (LVD) 2014/35/EU and Electromagnetic Compatibility (EMC) Directive 2014/30/EU. The unit is based on: EN 62109-1:2010; EN 62109-2:2011; IEC 62109-1(ed.1); IEC62109-2(ed.1); EN 61000-6-3:2007+A: 2011; EN 61000-6-1:2007; EN 61000-6-2:2005;

In case of installation in PV system, startup of the unit (i.e. start of designated operation) is prohibited until it is determined that the full system meets the requirements stipulated in EC Directive (2014/35/EU, 2014/30/EU, etc.), The grid connected inverter leave the factory completely connecting device and ready for connection to the mains and PV supply ,the unit shall be installed in accordance with national wiring regulations. Compliance with safety regulations depends upon installing and configuring system correctly, including using the specified wires.

The system must be installed only by professional assemblers who are familiar with requirements for safety and EMC. The assembler is responsible for ensuring that the end system complies with all the relevant laws in the country where it is to be used.

The individual subassembly of the system shall be interconnected by means of the wiring methods outlined in national/international such as the national electric code (NFPA) No.70 or VDE regulation 0107.

3 Introduction

3.1 Basic features


Revo Hybrid Series is a high-quality inverter which can convert solar energy to AC energy and store energy into battery.

The inverter can be used to optimize self-consumption, store in the battery for future use or feed in to public grid. Work mode depends on PV energy and user's preference. It can provide power for emergency use during the grid lost by using the energy from battery and inverter generated from PV.

System Diagram


Revo Hybrid Series is designed with two EPS versions for customer to choose based on the local rules.

E Version applies to the wiring rules that requires the Live line and N (Neutral) line of EPS must be disconnected with the Live line and N (Neutral) line of grid (applies to most countries).

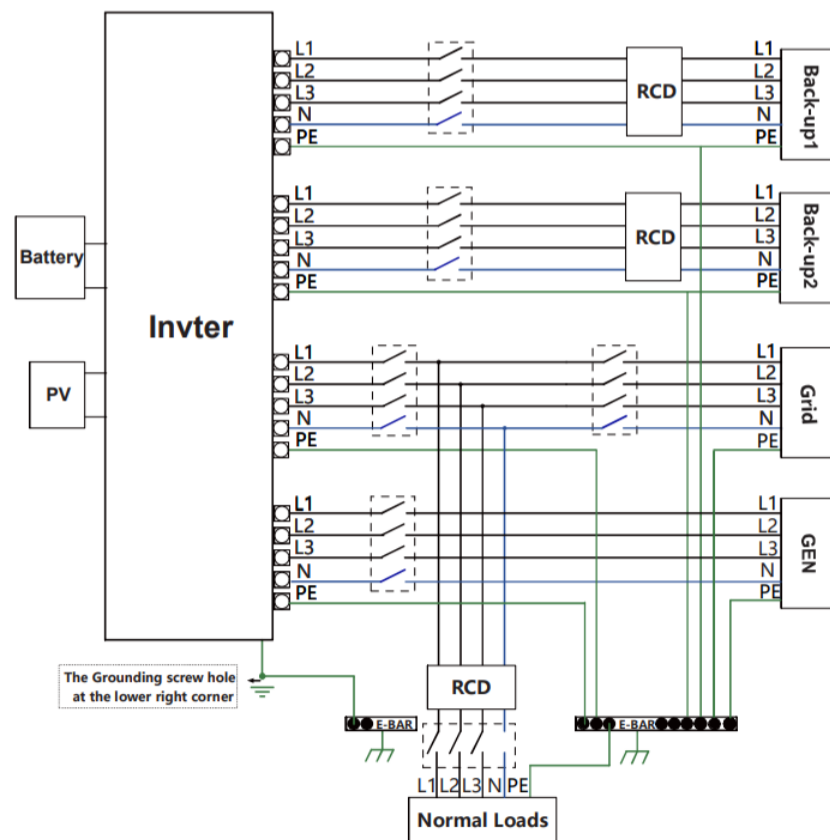

Introduction

I Version applies to the wiring rules that requires N (Neutral) line of alternative supply must NOT be isolated or switched (applies to wiring rules AS/NZS_3000:2012 for Australia and New Zealand).

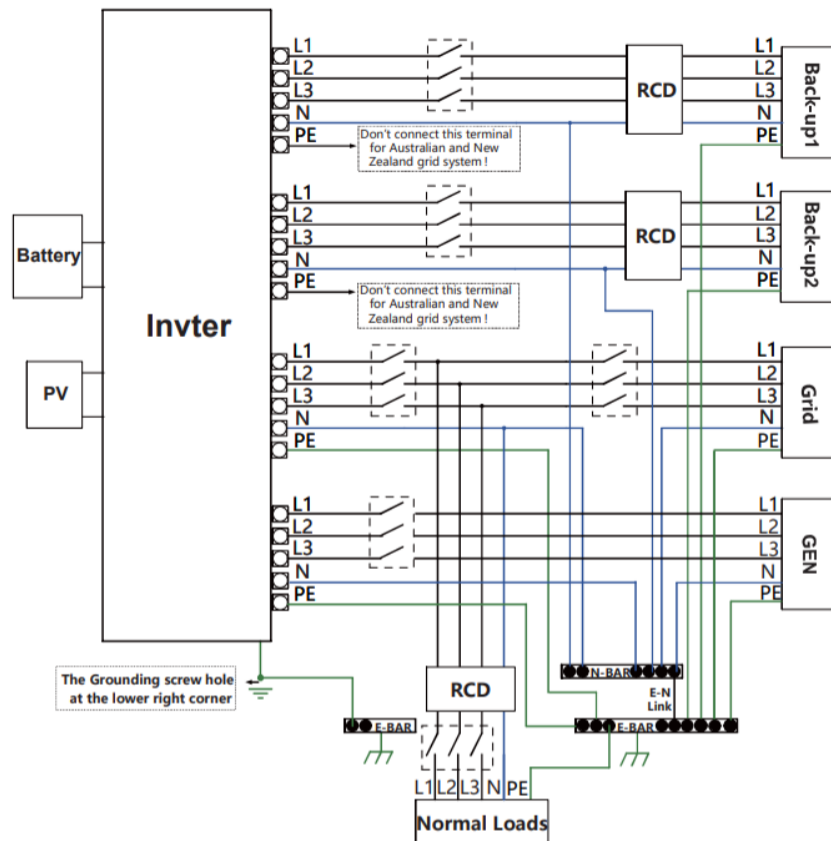

Note!


- Please control the home loads, and make sure it's within the "EPS output rating" under EPS mode, otherwise the inverter will Shut down with an "overload fault" warning.
- Please confirm with the mains grid operator whether there is any special regulations for grid connection.
- The wiring diagram is for reference only, and the complete electrical connection shall meet the requirements of local regulations.
- Do not misconnect the phase sequence. Otherwise, the inverter cannot run normally.




3.2 Work Modes

Inverter provides multiple work modes based on different requirements.

synonymy: Back-UP/EPS/LOAD

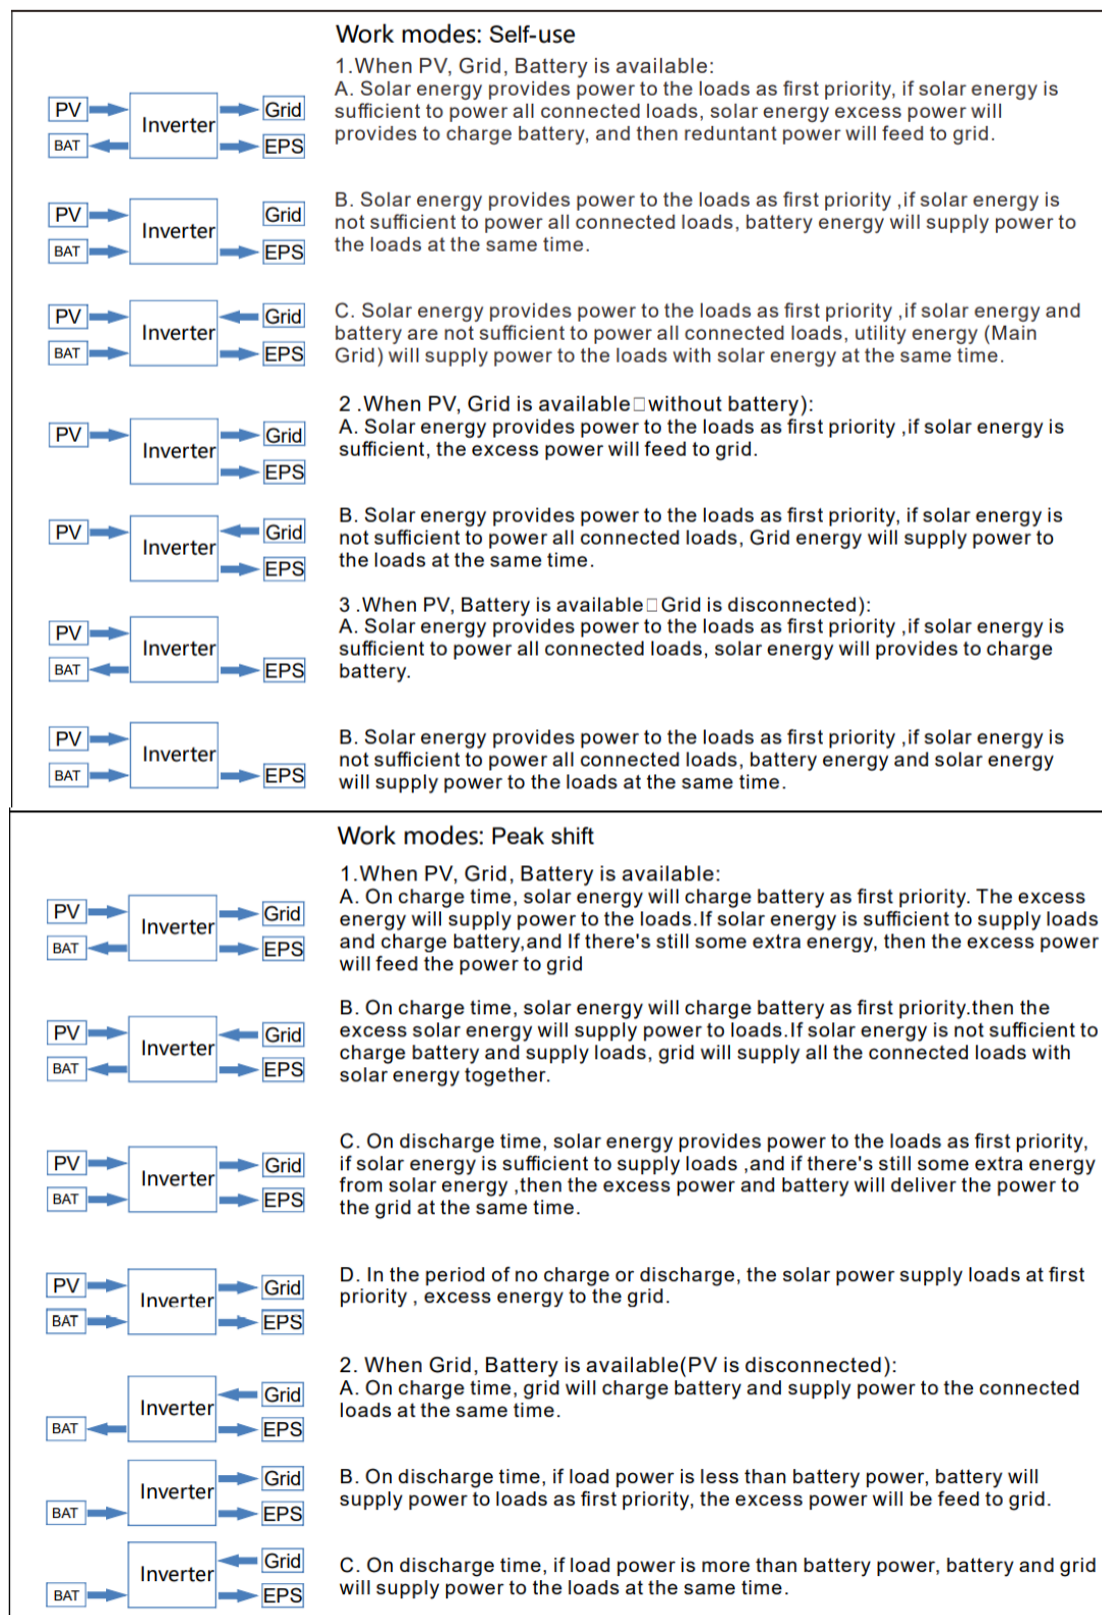

Introduction

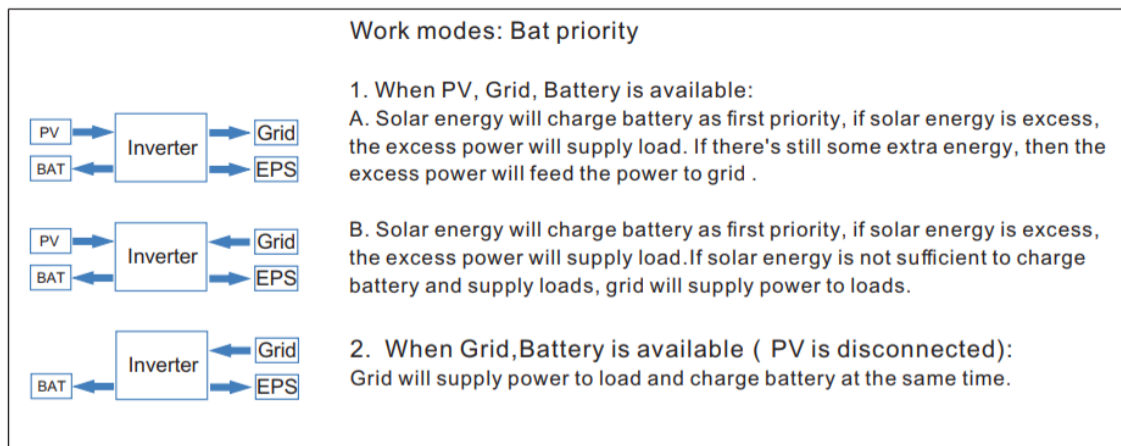


Note!


- If set anti-Reverse function allowable, Once on the work mode of Self-use, Peak shift, battery priority, the system will not feed power to grid.

3.3 Dimension

Unit: mm

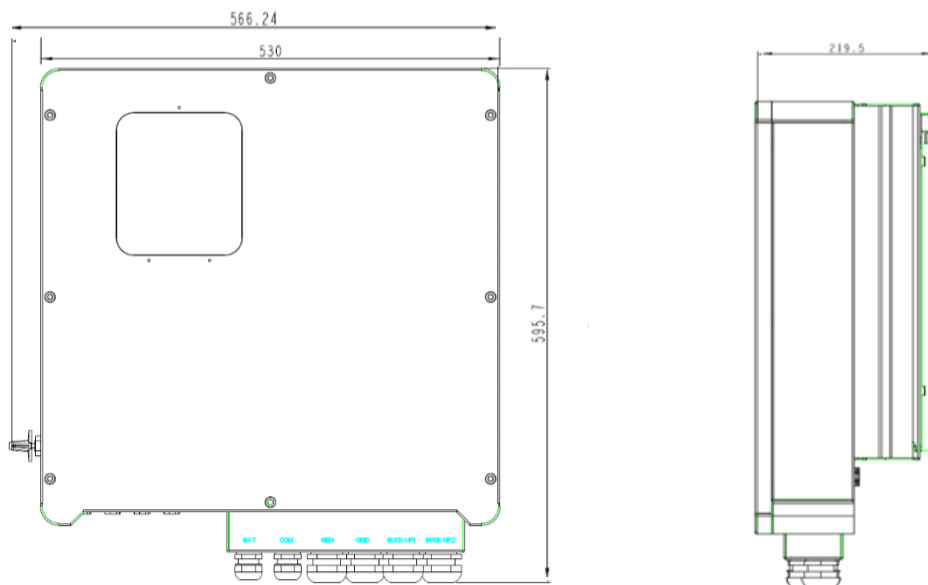

3.4 Terminals of Hybrid inverter

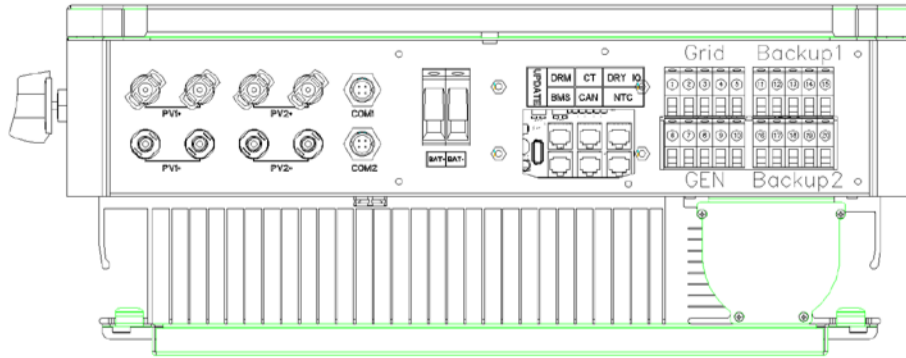

Function	label	Description
PV string 1 Input port	PV1+	PV string 1 positive input (Spare a terminal on the left)
	PV1-	PV string 1 negative input (Spare a terminal on the left)
PV string 2 Input port	PV2+	PV string 2 positive input (Spare a terminal on the left)
	PV2-	PV string 2 negative input (Spare a terminal on the left)
Communication interface	COM1	GPRS port(optional)
	COM2	WIFI port (optional)
BAT Port	BAT+	Battery Positive input
	BAT-	Battery negative input
signal line interface	UPDATE	Upgrading software Ports
	DRM	Function temporarily retained
	CT	Connect to CT (current transformer)
	DRY IO	dry contact
	BMS	BMS communication to Battery
	CAN	CAN communication
	NTC	NTC detection
Grid	①	Grid line A phase
	②	Grid line B phase
	③	Grid line C phase
	④	Grid line null line
	⑤	Grid line ground electrode
GEN (Diesel generator function is unreleased currently)	⑥	A phase
	⑦	B phase
	⑧	C phase
	⑨	null line
	⑩	ground electrode
Backup1	⑪	Backup1 line A phase
	⑫	Backup1 line B phase
	⑬	Backup1 line C phase
	⑭	Backup1 line null line,
	⑮	Backup1 line ground electrode

Introduction

Backup2	⑩⑥	Backup2 line A phase
	⑩⑦	Backup2 line B phase
	⑩⑧	Backup2 line C phase
	⑩⑨	Backup2 line null line,
	⑩⑩	Backup2 line ground electrode

4. Technical Data

Model		R6KH3	R8KH3	R10KH3	R12KH3	R15KH3
PV Input	Max. PV array power	9kW	12kW	15kW	18kW	22.5kW
	Max. input voltage	1000 V				
	MPP voltage range	180 V ~ 850 V				
	Min. input voltage / start voltage	125V/180V				
	No. of independent MPPT trackers / strings per MPPT input	2 / (1/1)				
	Max. input current per MPPT tracker	13 A/13A				
	Max. short-circuit current per MPPT tracker	16A/16A				25A/25A
Battery	Battery type	Lithium and Lead Acid Battery				
	Battery voltage range	125V ~ 600 V				
	Max. charging current / Max. discharging current	50 A / 50A				
	Rated. charging current / Rated. discharging current	40A/40A				
AC output	Nominal AC voltage	3W+N+PE, 220 / 380 V; 230 / 400 V; 240 / 415 V				
	AC voltage range	360V~440V				
	Rated AC grid frequency	50 Hz / 60 Hz				
	AC grid frequency range	50 Hz±5Hz / 60 Hz±5Hz				
	Rated active power	6 kW	8 kW	10 kW	12 kW	15 kW
	Rated apparent power	6kVA	8kVA	10kVA	12kVA	15kVA
	Max. apparent power	6.6kVA	8.8kVA	11 VA	13.2kVA	16.5kVA
	Rated grid output Current (@400V)	8.7A	11.5A	14.4A	17.3A	21.7 A
	Max. grid output current	9.5A	12.7A	15.9A	19.1A	23.8A
	Harmonics THDI (@ Nominal power)	< 3%				
AC input	Rated grid voltage	3W+N+PE, 220 / 380 V; 230 / 400 V; 240 / 415 V				
	Rated grid frequency	50Hz / 60Hz				
	Rated apparent power	12 kW	16 kW	20 kW	24 kW	30 kW
	Max. input apparent power from grid	13.2kVA	17.6kVA	22kVA	26.4kVA	33.3kVA
	Rated input current from grid	17.3A	23.1 A	28.9A	34.7A	43.4A
	Max. input current from grid	19A	25.5 A	31.9A	38.2 A	47.6A
BACKUP output	Nominal output voltage	3W+N+PE, 220 / 380 V; 230 / 400 V; 240 / 415 V				
	Nominal output frequency	50 Hz / 60 Hz				
	Rated apparent power	6kVA	8kVA	10kVA	12kVA	15kVA

Installation

Model		R6KH3	R8KH3	R10KH3	R12KH3	R15KH3
	Max. output apparent power	6.6kVA	8.8kVA	11kVA	13.2kVA	16.5kVA
	Peak output apparent power	6.6kVA	8.8kVA	11kVA	13.2kVA	16.5kVA
	Rated Current (@400V)	8.7A	11.5 A	14.4A	17.3 A	21.7A
	Max. output current	9.5A	12.7A	15.9A	19.1A	23.8A
	Max. switch time	≤20ms				
	Output THDI (@ Linear load)	<2%				
Efficiency	MPPT efficiency	≥99.5%				
	Max efficiency	97.90%	97.90%	98.20%	98.20%	98.50%
	Euro efficiency	97.20%	97.20%	97.50%	97.50%	97.6%
	Max. battery to load efficiency	97.50%	97.50%	97.50%	97.60%	97.80%
Safety protection	DC-side disconnection device	●				
	PV string reverse polarity protection	●				
	All-pole sensitive residual current monitoring unit	●				
	Anti-islanding protection	●				
	AC output over current protection	●				
	AC output short circuit current protection	●				
	AC over voltage protection	●				
	Protection class (as per IEC 62109-1)	I				
	overvoltage category (as per IEC 62109-1)	AC: III; DC: II				
General data	Power factor at rated power / adjustable displacement	0.99 / 0.8 leading to 0.8 lagging				
	Dimensions (W / H / D)	530 / 560 / 220 mm				
	Device weight	30 kg	30 kg	31kg	32 kg	34 kg
	Installation	Wall-mounted				
	Operating temperature range	-25 °C~+60 °C				
	Noise emissions (typical)	< 35 dB(A)				
	Standby consumption	< 3 W				
	Cooling concept	Natural convection				
	Ingress protection rating (as per IEC 60529)	IP65				
	Climatic category (according to IEC 60721-3-4)	4K4H				
	Max. permissible value for relative humidity	0~95%				
	(non-condensing)					

Installation

Model		R6KH3	R8KH3	R10KH3	R12KH3	R15KH3
	Max. operating altitude	4000m (>2000m power derating)				
Features	Inverter topology (Solar/ battery)	Transformer less / Transformer less				
	User interface	LED & App				
	Communication with BMS	RS485 / CAN				
	Communication with meter	RS485				
	Communication with portal	WIFI stick				
	Integrated power control / Zero export control	● / ●				
Standard Compliance	Safety	EN 62109-1, EN 62109-2				
	EMC	IEC 61000-6-1/-2/-3/-4, IEC 61000-3-11, IEC61000-3-12				


5. Installation

5.1Check for Physical Damage

Make sure the inverter is intact during transportation. If there is any visible damage, such as cracks, please contact your dealer immediately.

5.2Packing List

Open the package and take out the product, please check the accessories first. The packing list shown as below.

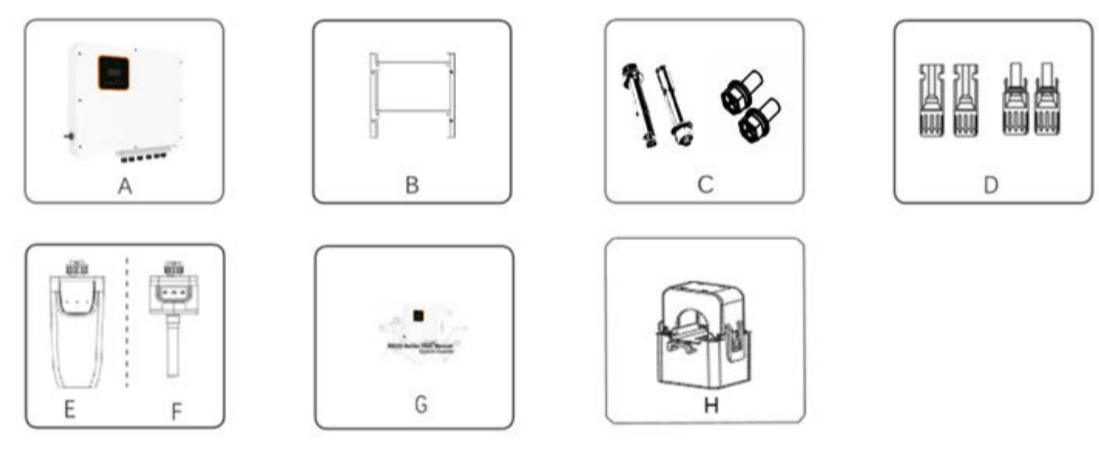

Object	Description
A	Inverter
B	Bracket
C	Expansion screws and pan-head screws
D	PV connectors (2*positive, 2*negative)
E	WIFI module (optional)
F	GPRS module (optional)
G	User manual
H	current transformer(CT)


5.3 Mounting

Installation Precaution

REVO Series inverter is designed for outdoor installation (IP 65). Make sure the installation site meets the following conditions:

- Not in direct sunlight.
- Not in areas where highly flammable materials are stored.
- Not in potential explosive areas.
- Not in the cool air directly.
- Not near the television antenna or antenna cable.
- Not higher than altitude of about 2000m above sea level.
- Not in environment of precipitation or humidity (> 95%).
- Under good ventilation condition.
- The ambient temperature in the range of -20°C to +60°C.
- The slope of the wall should be within $\pm 5^\circ$.
- The wall hanging the inverter should meet conditions below:
 1. solid brick/concrete, or strength equivalent mounting surface;
 2. Inverter must be supported or strengthened if the wall's strength isn't enough (such as wooden wall, the wall covered by thick layer of decoration)

Please AVOIDE direct sunlight, rain exposure, snow laying up during installation and operation.

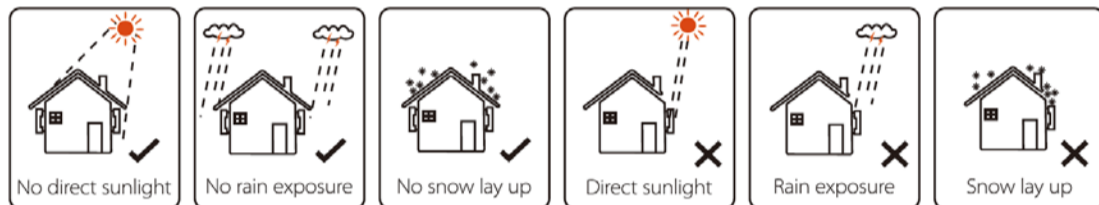

Installation

Space Requirement



Position	Min size
Left	300mm
Right	300mm
Top	300mm
Bottom	300mm
Front	300mm

Mounting Steps

Tools required for installation.

Installation tools: crimping pliers for binding post and RJ 45, screwdriver, manual wrench etc.



Step 1: Screw the wall bracket on the wall

1.1 Place the bracket on the wall and mark down the position of the 4 holes.

1.2 Drill holes with drill, make sure the holes are deep enough (at least 60mm) to support the inverter.



1.3 Install the expansion tubes in the holes, and tighten them. Then install the wall bracket with the expansion screws.

Step 2: Place the inverter on the wall mounted bracket by holding the handle on the side.



Step 3: Tighten the fixing screws on both sides of the inverter.

Step 4: If necessary, customer can install an anti-theft lock on the left-bottom of the inverter.

Installation

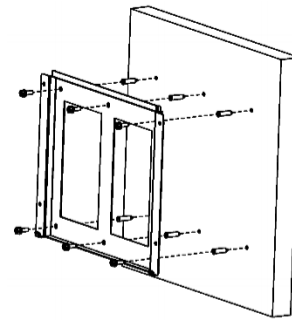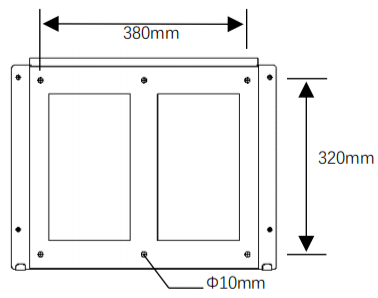

Step1

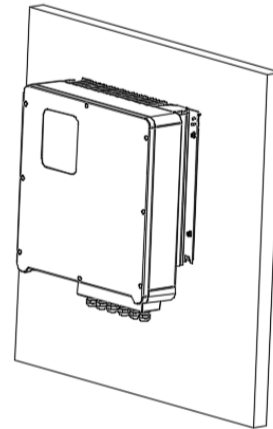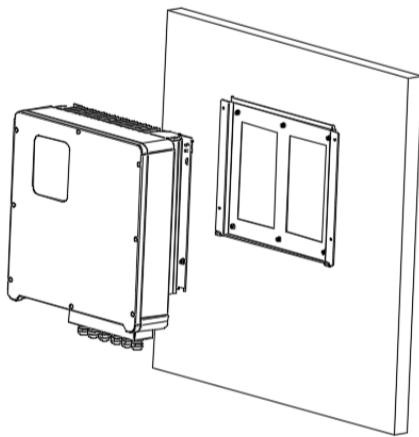

Step2

6. Electrical Connection

6.1 PV connection

Revo Hybrid can be connected in series with 2-strings PV modules for 6KW, 8KW, 10KW, 15KW .

Select PV modules with excellent function and reliable quality. Open-circuit voltage of module arrays connected in series should be Less than Max. DC input voltage; operating voltage should be conformed to MPPT voltage range.

Max. DC Voltage Limitation

Model	R6KH3	R8KH3	R10KH3	R12KH3	R15KH3
Max. DC Voltage (V)	1000				
MPPT Voltage Range (V)	180~850				



Warning!

- PV module voltage is very high, which already achieve dangerous voltage range, please comply with electric safety rules when connecting.
- Please do not make PV positive or negative ground!




Note!

- The following requirements of PV modules need to be applied for each input area;
- Please do not make PV positive or negative ground!
- In order to save cable and reduce the DC loss, we suggest to install the inverter near PV modules.



Note!

PV connection mode below is NOT allowed!

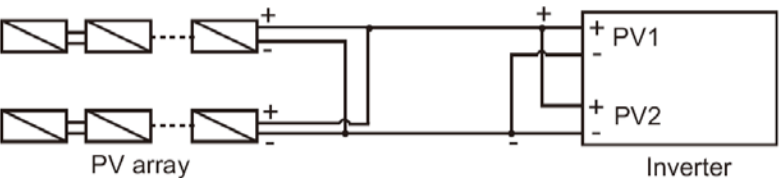

Electrical Connection

Connection Steps:

Step1. Checking PV module.

- 1.1 Use voltmeter to measure module array voltage.
- 1.2 Check the PV+ and PV- from the PV string combiner box correctly.
- 1.3 Please make sure the impedance between the positive pole and negative pole of PV to earth should be MΩ level.


Step2. Separating the DC connector.

Step3. Wiring.

- 3.1 Choose the 12 AWG wire to connect with the cold-pressed terminal.
- 3.2 Remove 10mm of insulation from the end of wire.
- 3.3 Insert the insulation into pin contact and use crimping plier to clamp it.

Step4. Insert pin contact through the cable nut to assemble into back of the male or female plug. When you feel or heard a “click” sound the pin contact assembly is seated correctly.

Step5. Plug the PV connector into the corresponding PV connector on inverter

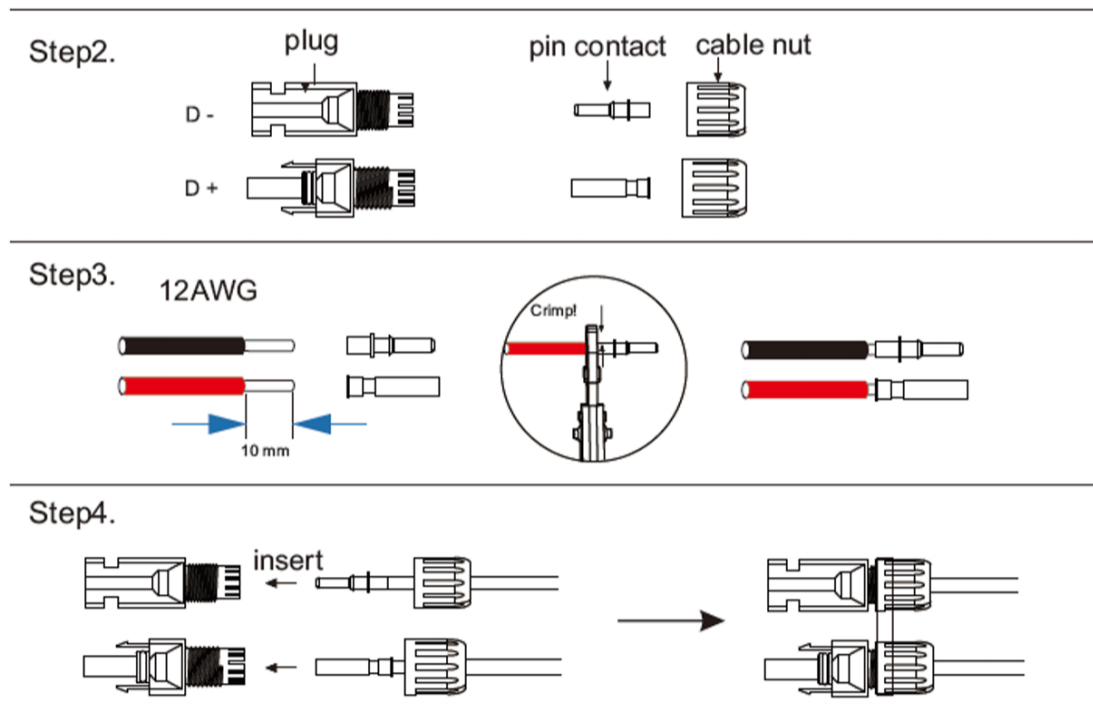

6.2 Grid Connection

Revo-Hybrid series inverter are designed for single phase grid. Voltage is 220/230/240V, frequency is 50/60Hz. Other technical requests should comply with the requirement of the local public grid.

Table 4 Cable and Micro-breaker recommended

Model	R6KH3	R8KH3	R10KH3	R12KH3	R15KH3
Cable	4-5mm ²				5-6mm ²
Micro-breaker	20A				32A

Micro-breaker should be installed between inverter and grid, any load should not be connected with inverter directly.

Connection Steps:

Step1. Check the grid voltage.

- 1.1 Check the grid voltage and compare with the permissive voltage range (Please refer to technical data).
- 1.2 Disconnect the circuit board from all the phases and secure against re-connection.


Step2. Remove the waterproof lid from the grid port on the inverter.

Step3. Make AC wires.

- 3.1 Choose the appropriate wire (Cable size: refer to Table 4).
- 3.2 Reserve about 60mm of conductor material sectional area.
- 3.3 Remove 10mm of insulation from the end of wire.
- 3.4 Clamp down the terminals with crimping pliers
- 3.5 Disassembly of waterproof connectors and waterproof covers and pass the cable through the waterproof connector.


Step4. Connect the AC connector to the GRID port of the inverter with a slotted screwdriver

Step2

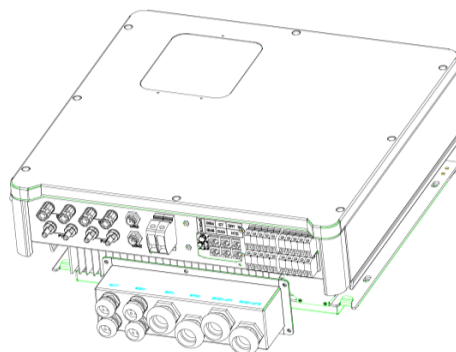


Electrical Connection

Step3

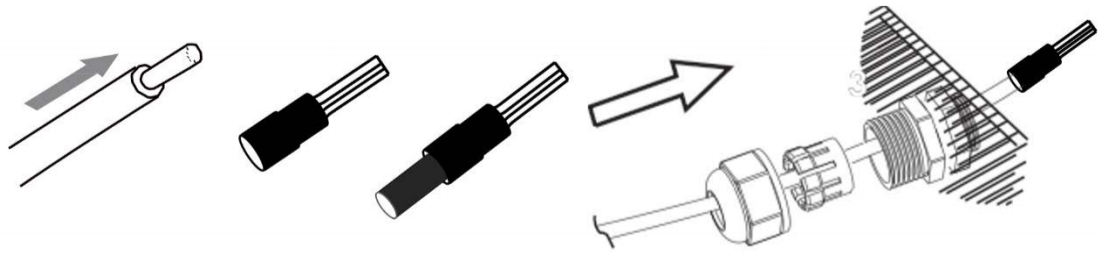

Step4

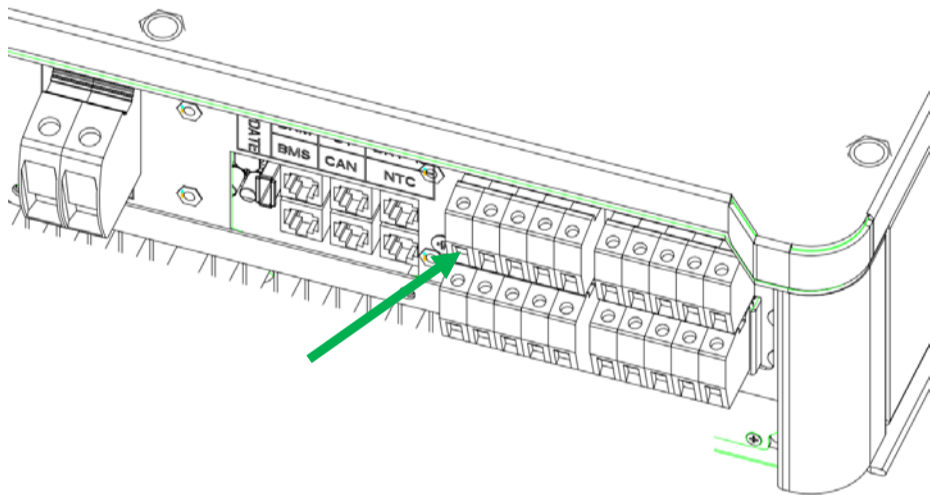

6.3 EPS Connection (apply to I Version and E Version only)

REVO series inverter has on and off grid function, the inverter will deliver output power through AC port when the grid is on, and it will deliver output power through EPS port when the grid is off.

I Version & E Version

REVO series inverter provides two versions for customer to choose based on the local rules.

“I Version” means inverter has an build-in changeover switch. This version applies to the wiring rules which requires N (Neutral) line of alternative supply must not be isolated or switched. (applies to wiring rules AS/NZS3000:2014 of Australia and New Zealand.)

“E Version” means inverter needs to install an external changeover device for EPS function. This version applies to the wiring rules which allows N (Neutral) line of alternative supply can be isolated or switched. (applies to most of the countries).

Auto & Manual

EPS function can be achieved automatically or manually according to user's wishes. For “I Version” inverter, EPS function can only be triggered automatically.

For “E Version” inverter, EPS function can be triggered either automatically or manually according to user's preference.


If user wants to use this function manually, it will need to be installed an external switch.

Please refer to specific wiring diagram below.


For solution, please contact our sales.

Electrical Connection

E Version Auto Required for Changeover Switch. synonymy: Back-UP/EPS/LOAD

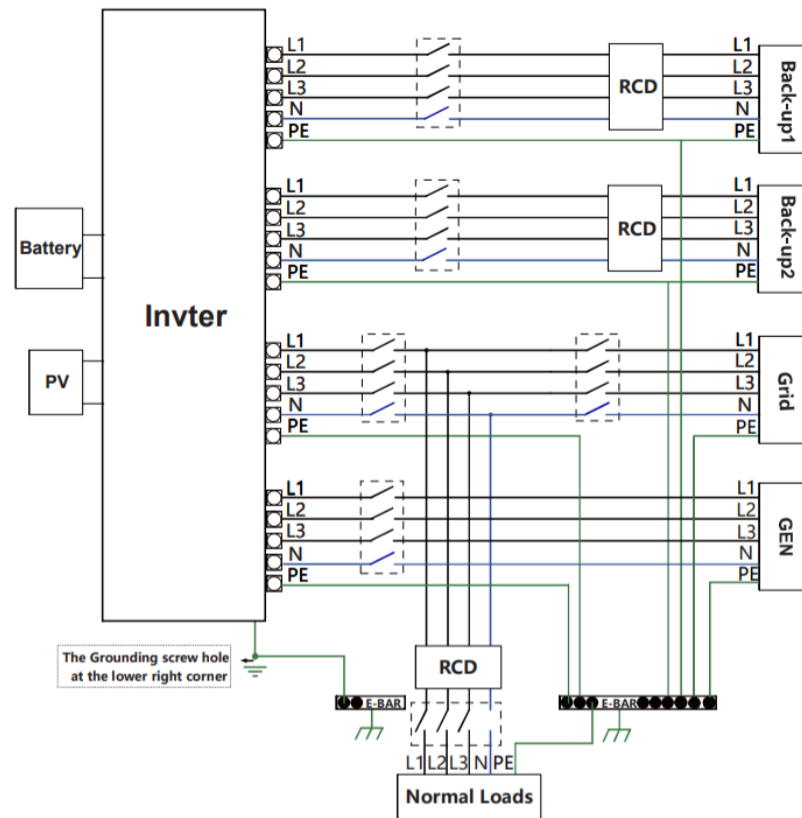

I Version Auto Do not require for Changeover Switch. synonymy: Back-UP/EPS/LOAD

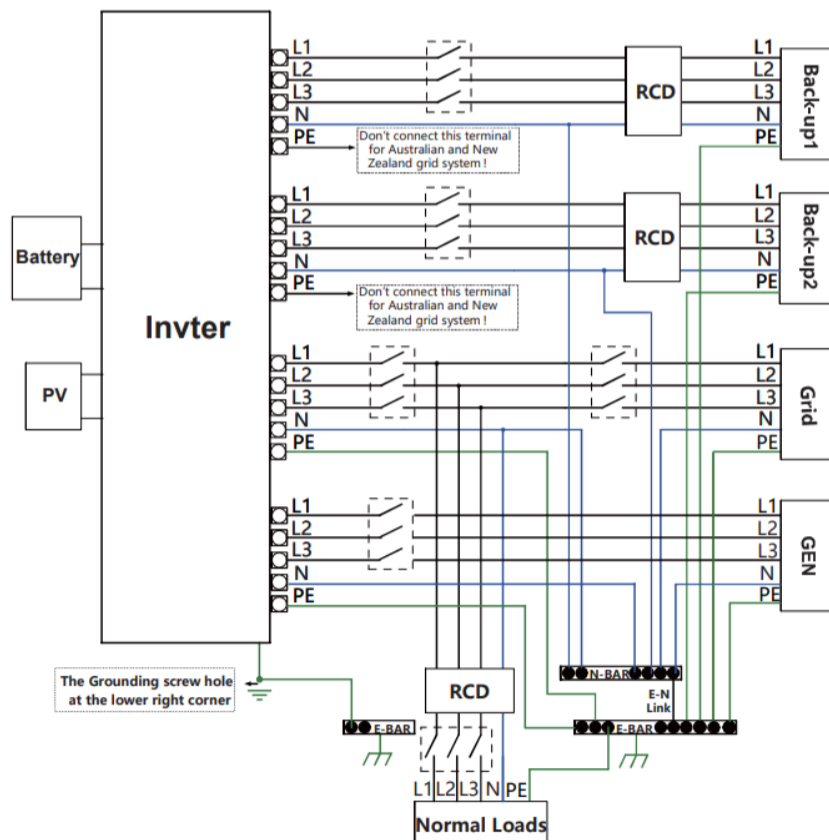

Electrical Connection

Please contact our sales for any compatible contactor purchase requirement

Note!



In case of discrepancies between wiring mode of local policy and the operation guide above, especially for the wiring of n (neutral) line, grounding and RCD, please contact us before any operation! The wiring diagram is for reference only, and the complete electrical connection shall meet the requirements of local regulations.

REVO Series hybrid inverter has On and Off grid function, the inverter will deliver output power through AC port when the grid is on, and it will deliver output power through BACKUP port when the grid is off.

BACKUP1 for very important load, BACKUP2 for important or normal load.

When there is a power outage or when there is no power grid

- 1) If the battery does not report low voltage or under voltage alarm, the inverter will supply power to both BACKUP1 and BACKUP2
- 2) If the battery generates a low voltage or under voltage alarm, the inverter only supplies power to BACKUP1

Table 5 Cable and Micro-breaker recommended

Model	R6KH3	R8KH3	R10KH3	R12KH3	R15KH3
Cable	4-5mm ²				5-6mm ²
Micro-breaker	20A				32A

Connection Steps:


Step1. Make EPS wires

- 3.1 Choose the appropriate wire (cable size: refer to picture below).
- 3.2 Reserve about 60mm of conductor material sectional area.
- 3.3 Remove 10mm of insulation from the end of wire.
- 3.4 Clamp down the terminals with crimping pliers
- 3.5 Disassembly of waterproof connectors and waterproof covers and pass the cable through the waterproof connector.

Step2. Connect the AC connector to the EPS port of the inverter with a slotted screwdriver.


The arrow (top) is backup1, The arrow (bottom) is backup2,

Step1

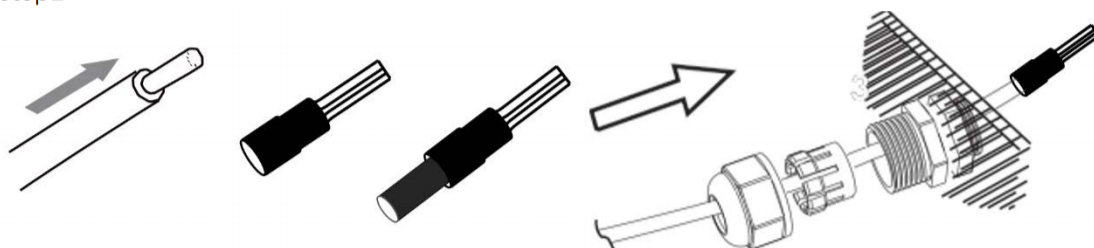


Electrical Connection

Step2

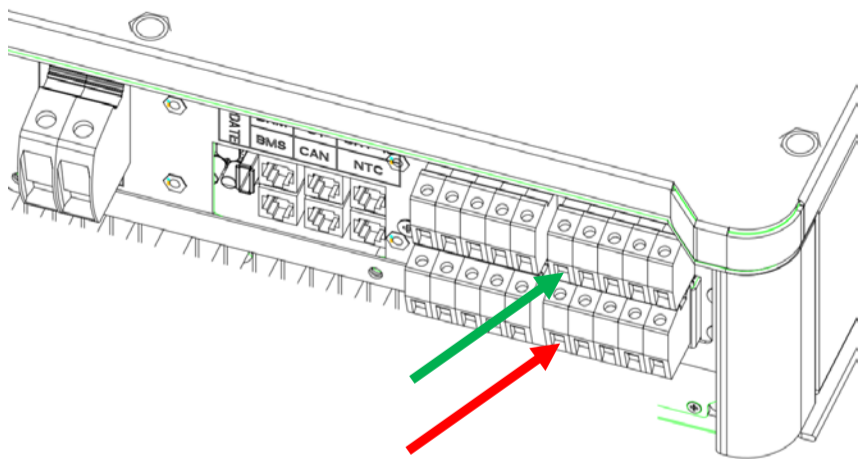

Requirements for EPS load






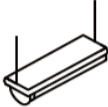
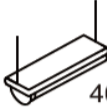



WARNING!

Make sure the EPS load power rating is within EPS output rating, otherwise the inverter will shut down with an “over load” warning.

When an “over load” is appeared, adjust the load power to make sure it is within the EPS output power range, then turn the inverter back on.

For the nonlinear load, please make sure the inrush power should be within the EPS output power range.

Below table shows some common feasible loads for you reference.

Type	Power		Common equipment	Example		
	Start	Rated		Equipment	Start	Rated
Resistive load	R 1	R 1	  Incandescent lamp TV	 100W Incandescent lamp	100VA (W)	100VA (W)
Capacitive load	R 2	R 1.5	 Fluorescent lamp	 40W Fluorescent lamp	80VA (W)	60VA (W)
Inductive load	R 3~5	R 2	  Fan Fridge	 150W Fridge	450-750VA (W)	300VA (W)

Electrical Connection

6.4 Battery Connection

Charging & discharging system of Revo Hybrid series inverter is designed for high-voltage lithium battery.


Before choosing battery, please note the battery communication should be compatible with Revo Hybrid inverter

Battery breaker

Before connecting to battery, please install a nonpolar DC breaker to make sure inverter can be securely disconnected during maintenance

Model	R6KH3	R8KH3	R10KH3	R12KH3	R15KH3
Voltage	Nominal voltage of DC breaker should be larger than maximum voltage of battery				
Current(A)	63A				

Battery connection diagram

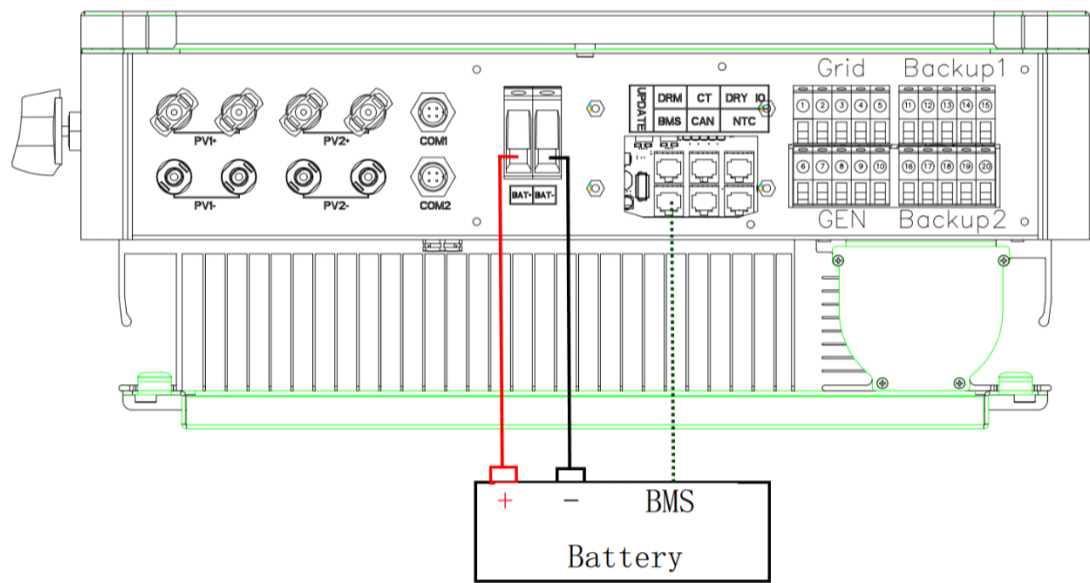

BMS PIN Defination

Communication interface between inverter and battery is RS485 or CAN with a RJ45 connector

	PIN	1	2	3	4	5	6	7	8
	CAN Definition	X	X	X	BMS_CANH	BMS_CANL	X	X	X
	Rs485 Definition	X	X	X	X	X	GND	BMS_485A	BMS_485B

When using RS485 protocol, please note that PIN2 must be disconnected

Electrical Connection



Note!

The battery communication can only work when the battery BMS is compatible with the inverter.

Power Connection Steps:

Step1,2,3. Choose the 10mm² wire and strip the cable to 15mm.


Step4. Remove waterproof cover plate.

Step5. Disassemble the waterproof connector and pass the cable through the waterproof connector.


Step6. Connect the cable to the terminal of the inverter.

Step6. Assemble waterproof connectors and waterproof covers plate.


Step1,2,3

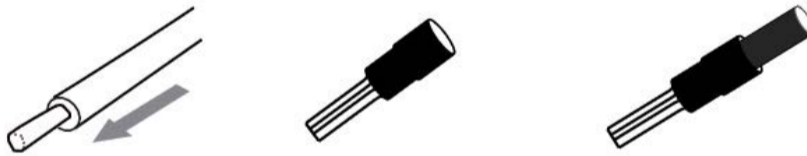

Step 4, 5

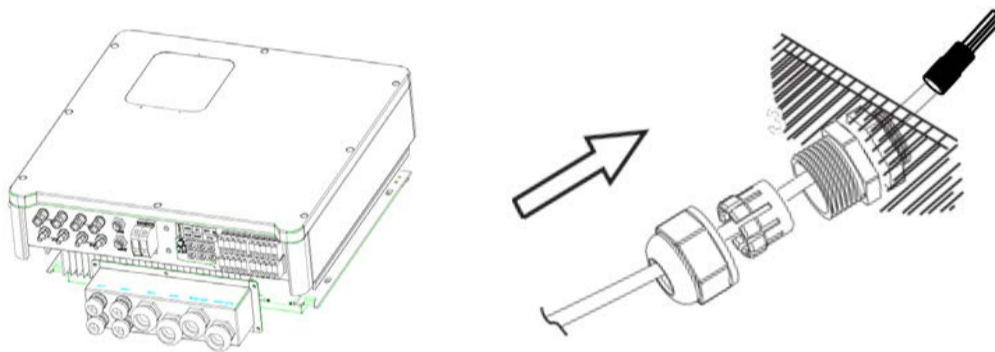


Step 6

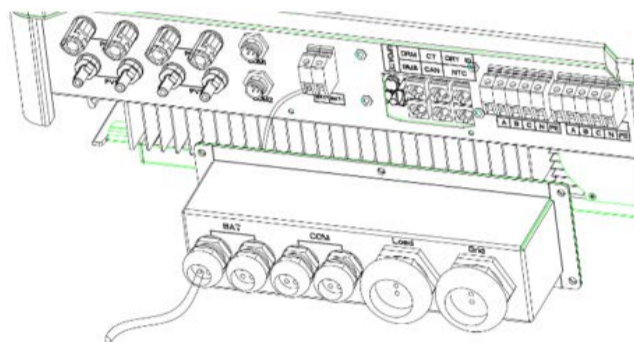

6.5 CT Connection and Phase instruction

CT is used for monitoring the power usage for entire house, at the meantime, inverter will also need the data from Meter to achieve the Export Control Function.

CT connection and phase wiring diagram

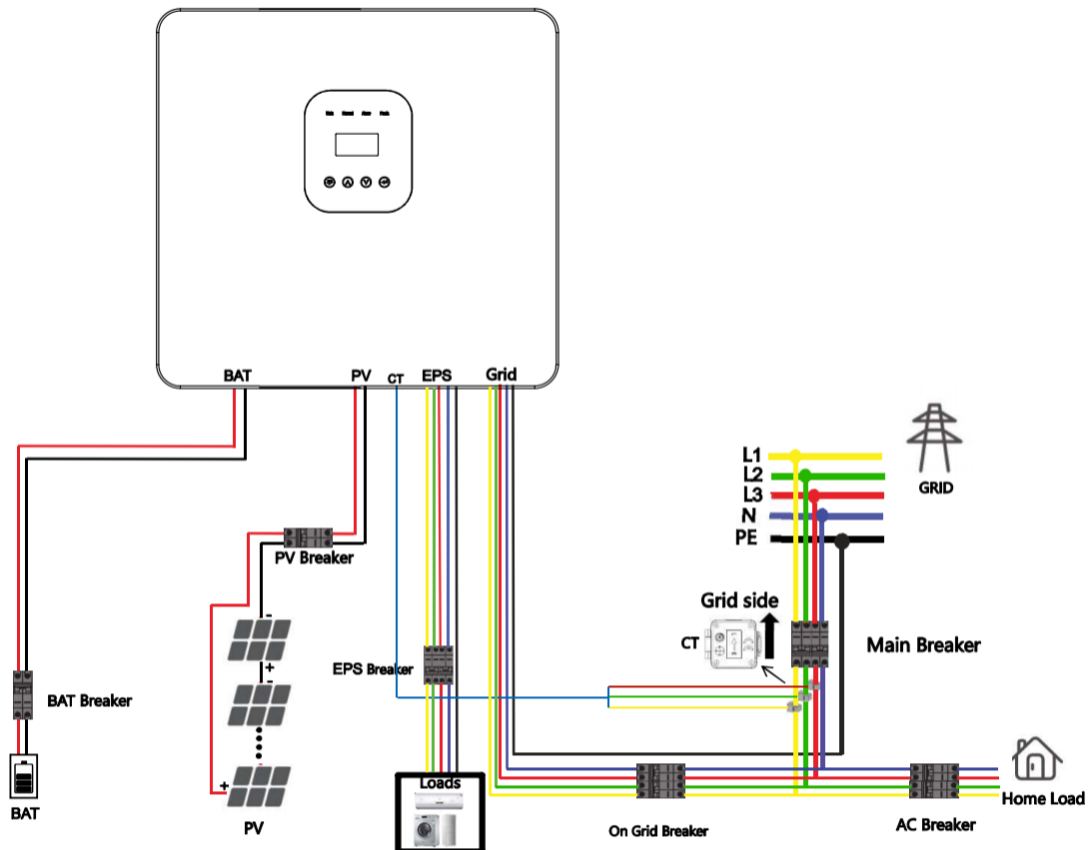

Note!



The CT arrow points to the power grid, otherwise the inverter display data will be wrong or the machine can't be used normally.

Do not misconnect the phase sequence. Otherwise, the inverter cannot run normally.

Electrical Connection

CT Connection Steps:


Step1. Disassembly of waterproof connectors and waterproof covers.

Step2. Prepare a communication cable (without sheath) and pass the cable through the waterproof connector.

Step3. Insert CT line side of the cable into CT port inside of inverter

Step4. Assemble waterproof connectors and waterproof covers plate.


Step1.2

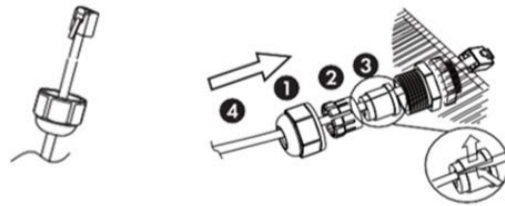


The seal is used for waterproof. Please make sure it has been kept back.

Step3

DRM	CT	Dry contact
BMS-485	Parallel	NTC
BMS-CAN		

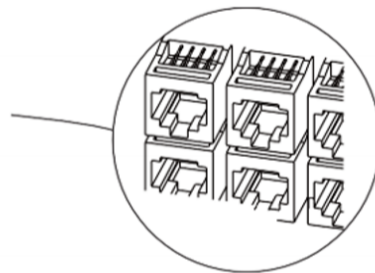


Step4

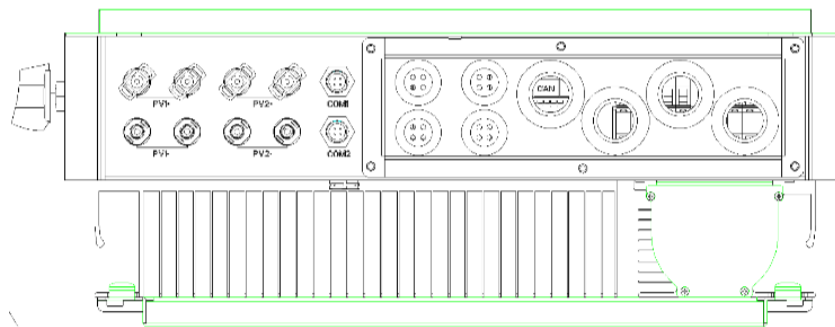

6.6 DRM Connection (Function temporarily retained)

DRM is provided to support several demand response modes by emitting control signals as below.


Note: Only PIN6(DRM0) is available now, and other PIN functions are being developed



DRM Connection Steps:

Please refer to CT connection steps for DRM connection. Please kindly noted the PIN definition and port position will be slightly different.


Step1,2

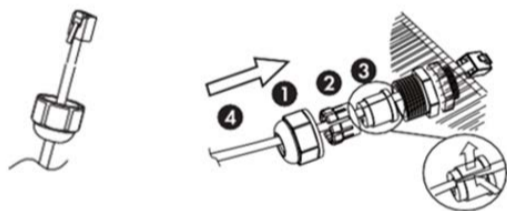


The seal is used for waterproof. Please make sure it has been kept back.

Step3

DRM	CT	Dry contact
BMS-485	Parallel	NTC
BMS-CAN		

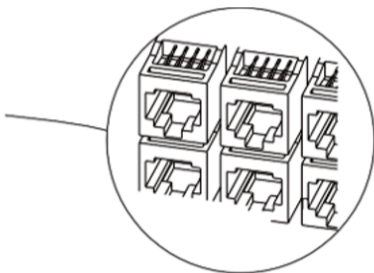

Step4

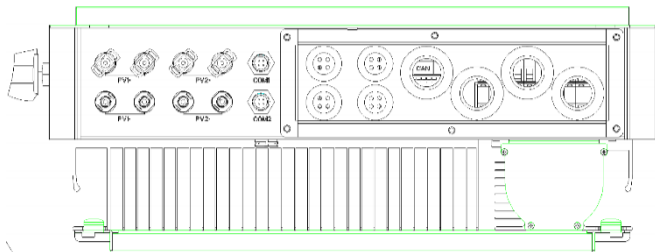


Electrical Connection

6.7 WiFi Connection(optional)

Inverter provides a WIFI port which can collect data from inverter and transmit it to monitoring-website by WIFI.

(Purchase the product from supplier if needed)

Diagram

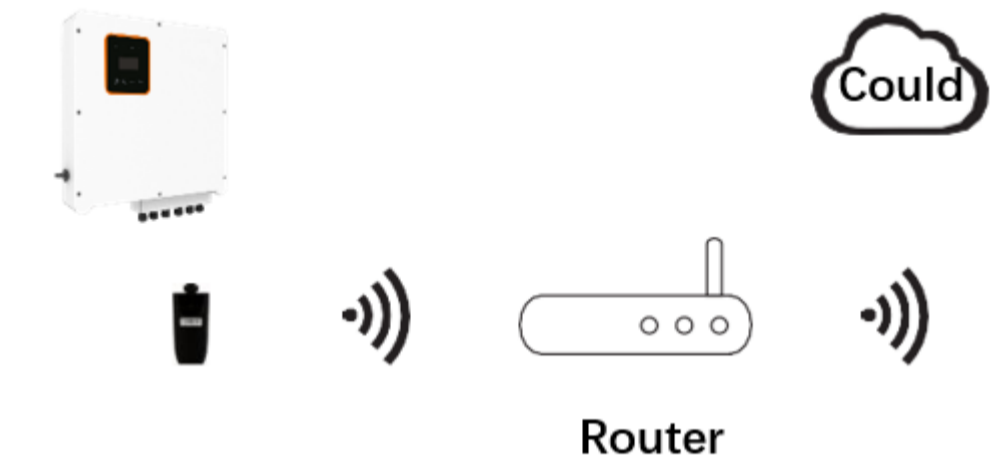


WiFi Connection Steps:

Step1. Plug WIFI into COM2(WIFI) port at the bottom of the inverter.

Step2. Build the connection between the inverter and router.


Step3. Create a user account online. (Please check the WIFI user manual for more details).

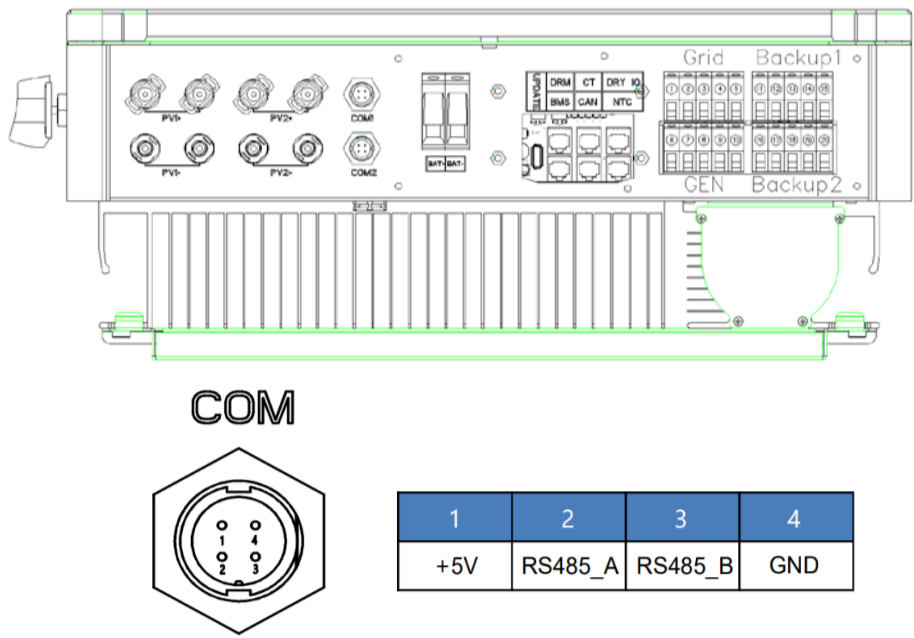


6.8GPRS Connection(optional)

Revo Hybrid inverter provides a GPRS(radio frequency) interface which control the switch time of a designated load via an Smart Plug (purchase the product from supplier if needed.) so that the load mostly consumes PV energy and incurs the lowest-possible energy costs during operation.

Diagram

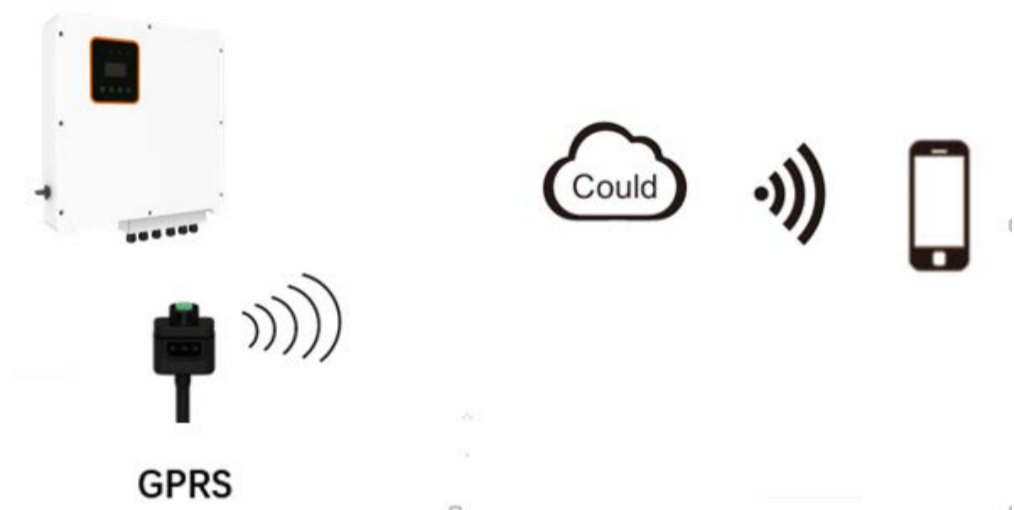

GPRS Connection Steps:
Please refer to the Smart Plug user manual for detailed connection steps. Com1 is GPRS port.

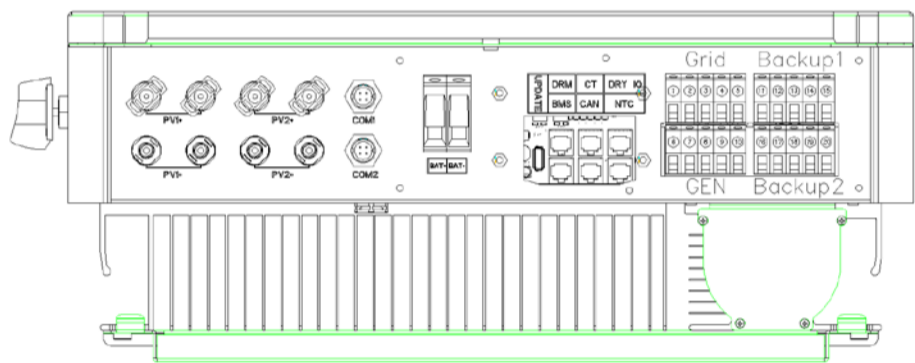

COM

1	2	3	4
+5V	RS485_A	RS485_B	GND


6.9 Inverter Manipulation

Start inverter after checking all below Steps:

- Ensure the inverter fixed well on the wall.
- Make sure all the DC wiring and AC wiring are completed.
- Make sure the meter/CT is connected well.
- Make sure the battery is connected well.
- Make sure the external BACKUP contactor is connected well.
- (if needed) Turn on the AC switch and EPS switch.
- Turn on the PV/DC switch and battery switch.

Check the inverter:

Step1. Check the status of indicators and LCD screen. the indicator screen should display the main interface



Note!
If the left indicator is not blue please check below the three points:

- All the connections are correct.
- All the external breakers are switched on.
- The DC switch on the inverter is in the "ON" position.

Step2. If it is the first time to start up ,please follow it. For specific setting ,refer to section 8.2 (Setting).

Step3. Set wifi according to wifi user manual.

Step4. Operate "SelfTest". (applies to Italy only)





Self-test in accordance with CEI 0-21(applies to Italy only)

The self-test is only required for inverters, which are commissioned in Italy. The Italian standard requires that all inverters feeding into the utility grid are equipped with a self-test function in accordance with CEI 0-21. During the self-test, the inverter will consecutively check the protection reaction times and values for overvoltage, undervoltage, over frequency and underfrequency.

7. Setting

7.1 Control Panel




Object	Name	Description
A	LCD Screen	Display the information of the inverter.
B	Indicator LED	lit in green: The inverter is in grid mode. Off: The inverter is in not in grid mode.
C		lit in green: The inverter is in off-grid mode. Off: The inverter is in not in off-grid mode.
D		lit in Yellow: The inverter is in Warning . Off: The inverter has no Inverter Warning
E		lit in red: The inverter is in fault status. Off: The inverter has no errors.
	Function Button	Esc: Return from current interface or function.
		Up: Move cursor to upside or increase value.
		Down: Move cursor to downside or decrease value.
		Enter: Confirm the selection.

7.2 Instructions for LED Indicator

	Grid (Green)	EPS (Green)	Alarm (Yellow)	Fault (Red)
Initialization	off	off	off	off
Stand-by	off	off	off	off
Grid mode	on	/	/	/
Off-Grid	off	on	off	off
Bypass of mains	off	on	on	off
Fault	off	off	off	on


7.3 Instructions for the use of three modes

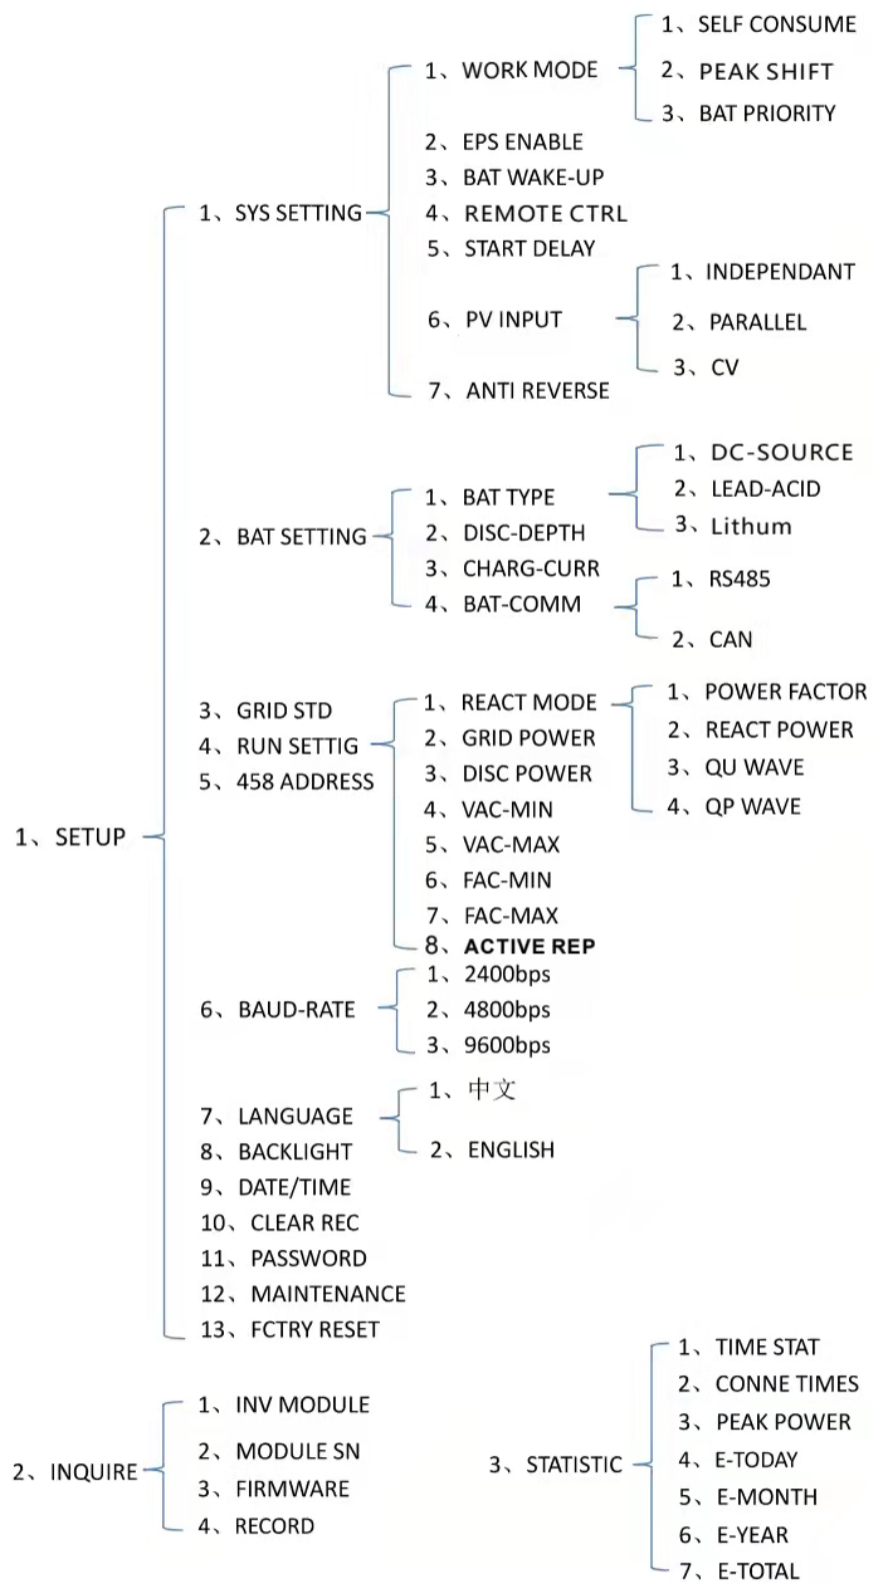


Fault diagnosis and solutions

For example, Before selecting the mode, you can set it up according to the local power grid, PV input mode and battery type.


Power grid :

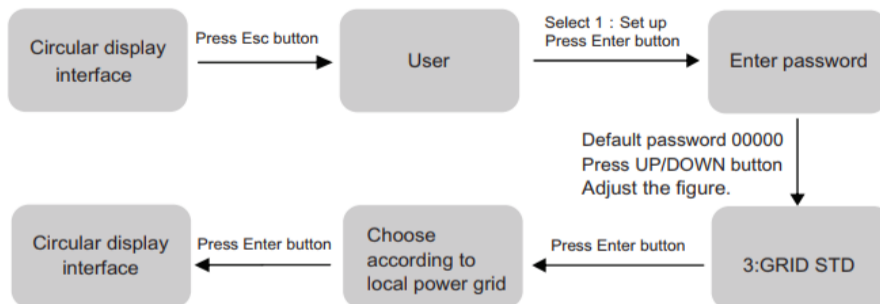

PVinput mode :

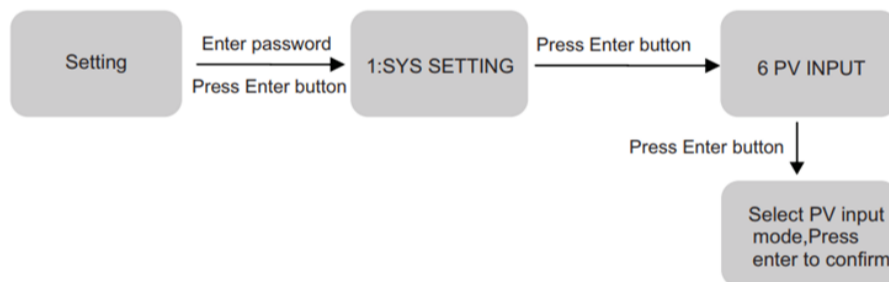



Battery parameters :



8. LCD Operation

8.1 LCD Interface

8.1.1 Error information

Interface	Description
<div> ERROR NO.  02:BatDisconnect 27:BMS Comm. fail </div>	<p>Numbers represent error codes and text is error information. Refer to Chapter 9 for contents.</p> <p>NOTE: When there is a lock mark  in the upper right corner of the screen, you cannot turn the page, you need to press Enter to unlock it first.</p>

8.1.2 System setting1

Interface	Description
<div> SYSTEM1 STATE : SELF CSM GRID : CN PV I/P : PARALL </div>	<p>State: Setting of the whole inverter working mode. Including: SELF CONSUME, PEAK SHIFT and BAT PRIORITY. Refer to Chapter 3.2 for specific contents.</p> <p>Grid standard: Displays the grid standard actually set.</p> <p>PV input mode: The display value is the setting value of PV input type. Including: INDEPENDANT, PARALLEL, CV. Settings and explanations are provided in section 8.2.4.6.</p>

8.1.3 System setting2

Interface	Description
<div> SYSTEM2 BMS Com: CAN Anti Reve : DISA DOD: 80% </div>	<p>BMS Com: Battery Management System communication mode. Including: CAN or RS485.</p> <p>Anti-Reverse :Displays Whether Inverter isn't allowed to generate electricity to the Grid. Including: DISABLE,ENABLE The Settings are described in section 8.2.6.</p> <p>DOD: Depth of battery discharge. When the battery discharge exceeds the DOD parameter, the inverter generates a low voltage or under voltage alarm, and the battery stops discharging.</p>

8.1.4 System setting3

Interface	Description
<div> SYSTEM2 EPS ENABLE: ENAB </div>	<p>EPS ENABLE: When the Grid and PV are powered off, Enable the battery to supply power to the load, default option is enable.</p>

Fault diagnosis and solutions

8.1.5 PV1 Input display interface

Interface	Description								
<table><tr><td>PV1</td><td>INPUT</td></tr><tr><td>VOLT:</td><td>0.0V</td></tr><tr><td>CURR:</td><td>0.00A</td></tr><tr><td>POWER:</td><td>0W</td></tr></table>	PV1	INPUT	VOLT:	0.0V	CURR:	0.00A	POWER:	0W	<p>PV1 input real-time voltage</p> <p>PV1 input real-time current</p> <p>PV1 input real-time power.</p>
PV1	INPUT								
VOLT:	0.0V								
CURR:	0.00A								
POWER:	0W								

8.1.6 PV2 Input display interface

Interface	Description								
<table><tr><td>PV2</td><td>INPUT</td></tr><tr><td>VOLT:</td><td>0.0V</td></tr><tr><td>CURR:</td><td>0.00A</td></tr><tr><td>POWER:</td><td>0W</td></tr></table>	PV2	INPUT	VOLT:	0.0V	CURR:	0.00A	POWER:	0W	<p>PV2 input real-time voltage</p> <p>PV2 input real-time current</p> <p>PV2 input real-time power.</p>
PV2	INPUT								
VOLT:	0.0V								
CURR:	0.00A								
POWER:	0W								

8.1.7 DC Voltage interface

Interface	Description								
<table><tr><td>DC</td><td>VOLTAGE</td></tr><tr><td>BUS+:</td><td>0.0V</td></tr><tr><td>BUS-:</td><td>0.0V</td></tr><tr><td>LeakCur:</td><td>0mA</td></tr></table>	DC	VOLTAGE	BUS+:	0.0V	BUS-:	0.0V	LeakCur:	0mA	<p>BUS+: Real-time voltage of bus capacitor of the inverter.</p> <p>BUS-: Real-time voltage of bus capacitor of the inverter.</p> <p>Leakage current: Real-time leak current of the inverter.</p>
DC	VOLTAGE								
BUS+:	0.0V								
BUS-:	0.0V								
LeakCur:	0mA								

8.1.8 Battery interface

Interface	Description								
<table><tr><td>BATTERY</td><td></td></tr><tr><td>VOLT:</td><td>0.0V</td></tr><tr><td>CURR:</td><td>0.0A</td></tr><tr><td>STA:</td><td>C D F</td></tr></table>	BATTERY		VOLT:	0.0V	CURR:	0.0A	STA:	C D F	<p>Battery real-time voltage</p> <p>Battery real-time current</p> <p>STA: Battery status</p> <p>C : Indicates that the battery is rechargeable (From the BMS)</p> <p>D : Indicates that the battery can discharge (From the BMS)</p> <p>F : The battery requests a forcible charge (From the BMS)</p>
BATTERY									
VOLT:	0.0V								
CURR:	0.0A								
STA:	C D F								

8.1.9 Battery information interface

Interface	Description								
<table><tr><td>BATTERY</td><td>INFO</td></tr><tr><td>TYPE:</td><td>Lithium</td></tr><tr><td>TEMP:</td><td>26°C</td></tr><tr><td>SOC:</td><td>30%</td></tr></table>	BATTERY	INFO	TYPE:	Lithium	TEMP:	26°C	SOC:	30%	<p>TYPE: Battery type:(lead-acid, lithium battery)</p> <p>TEMP: Battery temperature.</p> <p>SOC: Percentage of battery capacity from the BMS</p>
BATTERY	INFO								
TYPE:	Lithium								
TEMP:	26°C								
SOC:	30%								

Fault diagnosis and solutions

8.1.10 Battery current interface

Interface	Description
<div> <div>BMS PRMETER</div> <div> CHAR VOL: 0.0V CHARGE: 0A DISCHA: 0A </div> </div>	CHAR VOL: Battery BMS request Max. charging voltage. CHARGE: Battery BMS request Max. charging current. DISCHA: Battery BMS request Max. discharging current.

8.1.13 Grid-connected

Interface	Description
<div> <div>GRID: 0.00Hz</div> <div> U: 0.0V 0.0A V: 0.0V 0.0A W:0.0V 0.0A </div> </div>	GRID FREQ: Grid real-time frequency. U: Gird-phase U real-time voltage. CT real-time current V: Gird-phase V real-time voltage. CT real-time current W: Gird-phase W real-time voltage. CT real-time current CT: Current sensor accessories

8.1.14 INV

Interface	Description
<div> <div>INV: 0.00Hz</div> <div> U: 0.0V 0.0A V: 0.0V 0.0A W:0.0V 0.0A </div> </div>	INV FREQ: Grid real-time frequency. U: INV -phase U real-time voltage. INV -phase U real-time current. V:INV -phase V real-time voltage. INV -phase V real-time current. W: INV -phase W real-time voltage. INV -phase W real-time current.

8.1.15 LOAD

Interface	Description
<div> <div>LOAD:</div> <div> U: 0.0V 0.0A V: 0.0V 0.0A W:0.0V 0.0A </div> </div>	synonymy: Back-UP/EPS/LOAD U: Load-phase U real-time voltage. Load-phase U real-time current. V: Load -phase V real-time voltage. Load-phase V real-time current. W: Load -phase W real-time voltage. Load-phase W real-time current.

8.1.16 INV POWER

Interface	Description
<div> <div>POWER</div> <div> INV U : 0.0W INV V : 0.0W INV W : 0.0W </div> </div>	INV: INV -phase U power. INV: INV -phase V power. INV: INV -phase W power

Fault diagnosis and solutions

8.1.17 GRID POWER

Interface	Description
<div>POWER</div> <div> GRID U : 0.0W GRID V : 0.0W GRID W : 0.0W </div>	<p>The CT arrow points to the power grid. The discharge from the inverter to the grid is "+", and the opposite is "-".</p> <p>GRID: GRID -phase U power. GRID: GRID -phase V power. GRID: GRID -phase W power.</p>

8.1.18 LOAD POWER PER

Interface	Description
<div>LOAD POWER PER</div> <div> U: 0W 0% V: 0W 0% W : 0W 0% </div>	<p>U : Load-phase U power percentage. V : Load-phase V power percentage. W: Load-phase W power percentage.</p>

8.1.19 POWER

Interface	Description
<div>POWER</div> <div> PV : 0W BAT: 0W </div>	<p>PV : PV power. BAT: Battery power.</p>

8.1.20 Temperature

Interface	Description
<div>TEMPERATURE</div> <div> INVER: 0°C DCDC: 0°C INSIDE: 0°C </div>	<p>INVER: DC/AC temperature. DCDC: DC/DC temperature. INSIDE: Internal ambient temperature.</p>

8.1.21 State

Interface	Description
<div>STATE</div> <div> SYS: STANDBY INV: STANDBY DCDC: STANDBY </div>	<p>System information: Display complete inverter status information, Including: Initialization, Standby, PV grid connection, Grid connection of battery, Hybrid power supply, Fault, Service ,Self - check, Off gird, grid, INV to PFC , Charging enable, Discharge enable, Force charge enable, etc.</p> <p>INV: Displays the inverter status information. DCDC: Displays charging and discharging status information</p>

8.2 Setting

8.2.1 State

Interface	Description
<div> <div>USER</div> <div>→ 1:SETUP 2:INQUIRE 3:STATISTIC</div> </div>	<p>SETUP: Press Enter to user settings interface.</p> <p>INQUIRE: Query inverter model, serial number, software version.</p> <p>STATISTIC: View inverter run statistics.</p>

8.2.2 SET Password

Interface	Description
<div> <div>PASSWORD</div> <div>INPUT: XXXXX</div> </div>	<p>Enter the password required for setting. The default password is "00000".</p> <p>Press the Up or Down keys to adjust the number, press the Enter key to move the cursor forward, and press the Esc key move the cursor backward.</p>

8.2.3 Setup

Interface	Description
<div> <div>SETUP</div> <div>→ 1:SYS SETTING 2:BAT SETTING 3:GRID STD 4:RUN SETTING 5:485 ADDRESS 6:BAUD RATE 7:LANGUAGE 8:BACKLIGHT 9:DATE/TIME 10:CLEAR REC 11:PASSWORD 12:MAINTENANCE 13:FCTRY RESET</div> </div>	<p>This interface is used for various information inquiry options.</p> <p>Press the Up/Down button to make the corresponding selection.</p> <p>Press Enter button to enter the selected menu.</p> <p>Press ESC button return to the user interface. (Refer to 8.2.1).</p> <p>There are 13 options in total.</p>

8.2.4 System setting

8.2.4.0 System setting

Interface	Description
<div> SYS SETTING → 1: WORK MODE 2: EPS ENABLE 3: BAT WAKE-UP 4: REMOTE CTRL 5: START DELAY 6: PV INPUT 7: Anti Reverse </div>	<p>This interface is used to access system information.</p> <p>Press Up/Down button to move corresponding options.</p> <p>Press Enter to enter the selected menu.</p> <p>Press ESC button to return to the setting interface.</p> <p>There are 7 options in total.</p>

8.2.4.1 Work mode

Interface	Description
<div> WORK MODE → 1:SELFCONSUME 2:PEAK SHIFT 3:BAT PRIORITY </div>	<p>This interface is used to select the working mode.</p> <p>Press ESC button return to setting interface. (Refer to 3.2)</p>

8.2.4.1.1 Peak shift work time

Interface	Description
<div> WORK MODE 1:SELFCONSUME → 2:PEAK SHIFT 3:BAT PRIORITY </div>	<p>This interface is used to select the working mode.</p> <p>Press ESC button return to setting interface. (Refer to 3.2).</p> <p>Select the peak shift mode, you also need to set the charge and discharge time</p>
<div> WORKTIME → 1:TIME 1 2:TIME 2 3:TIME 3 </div>	<p>It's allowed to set Three charging and discharging periods.</p> <p>When setting the time, ensure that the time of the inverter is the local time.</p> <p>Press Enter to enter the next menu.</p> <p>This parameter is set for one day. If the specified time conflicts, the first time is used as the main time perform. If the three time ranges do not conflict, the three time ranges are executed in sequence.</p>
<div> CHAG START1 00:00 CHARGE END100:02 DISC START1 00:03 DISCHA END1 23:59 </div>	<p>This interface is used to adjust the time of peak load shifting.</p> <p>Press Up/Down button to move the corresponding options.</p> <p>Press Enter to enter the selected menu.</p> <p>Press Esc button to return to the working mode interface.</p>

Fault diagnosis and solutions

8.2.4.2 EPS enable

Interface	Description
EPS ENABLE 1:DISABLE →2:ENABLE	When the Grid and PV are powered off, Enable the battery to supply power to the load, default option is enable.

8.2.4.3 Battery wake-up

Interface	Description
WAKE-UP EN →1:DISABLE 2:ENABLE	<p>When the battery is low and the battery relay has been disconnected, the inverter will send instructions to the battery forcibly sucking relay by BMS, and the inverter will charge. The default option is disabled. (Partial lithium battery support)</p> <p>If you want to use this feature, please consult the battery brand supported by the dealer. Use it only when the battery is too low.</p>

8.2.4.4 REMOTE CTRL

Interface	Description
REMOTE CTRL →1:DISABLE 2:ENABLE	Reserved

8.2.4.5 START DELAY

Interface	Description
START-UP DELAY INPUT: 60 UNIT: SEC	Reserved

8.2.4.6 PV INPUT MODE

Interface	Description
INPUT MODE →1.INDEPENDENT 2.PARALLEL 3.CV	<p>Setup of PV Input mode.</p> <p>INDEPENDENT: The default Settings</p> <p>PARALLEL: This feature is for test use only, not customer use.</p> <p>CV: This feature is for test use only, not customer use.</p> <p>The factory setting by default is Independent, When parallel input is set to be Independent mode, PV power will be imbalanced.</p>

Fault diagnosis and solutions

8.2.4.7 Anti Reverse

Interface	Description
Anti Reverse 1.DISABLE →2.ENABLE	Anti- Reverse: Whether Inverter isn't allowed to generate electricity to the Grid. The default option is disable.

8.2.5 BAT SETTING

8.2.5.0 BAT SETTING

Interface	Description
BAT SETTING →1.BAT TYPE 2.DISC-DEPTH 3.CHARG-CURR 4.BAT-COMM	This interface is used to select battery parameters. Press Up/Down button to move corresponding options; Press Enter button to enter the selected menu; Press ESC button to return to setting interface.

8.2.5.1 BAT TYPE

Interface	Description
BAT TYPE 1.DC-SOURCE →2.LEAD-ACID 3.Lithium	This interface is used to select battery type. Press Up/Down button to move corresponding options; Press Enter button to enter the selected menu. Select the LEAD-ACID enter button to enter LEAD-ACID interface; Set 1 to test and disable the setting.

8.2.5.1.1 Lead-acid battery parameter

Interface	Description
LEAD-ACID →1.CHARG-VOLT 2.BAT END VOLT 3:BAT OVP 4:BAT CAP	This interface is used to select LEAD-ACID battery parameter. Press Up/Down button to move corresponding options; Press Enter button to enter the selected menu; 1. Charge voltage 2. BAT end voltage 3. BAT over voltage
CHARGE VOLT INPUT: 135.0 UNIT: V	This interface is used to set the lead acid battery charging voltage. (The input value ranges from 135 to 600)

Fault diagnosis and solutions

Interface	Description
BAT END VOLT INPUT: 108.0 UNIT: V	This interface is used to set the lead-acid battery discharging voltage. (The input value ranges from 108 to 600) Discharge cut-off voltage, as recommended by the battery manufacturer.
BAT OVP INPUT: 141.0 UNIT: V	This interface is used to set the lead acid battery Charge protection voltage. (The input value ranges from 141 to 600) Charge protection voltage, as recommended by the battery manufacturer.
BAT CAP INPUT: 0450 UNIT: AH	This interface is used to set the lead acid Battery capacity. It is related to the input power. (The input value ranges from 50 to 1000) The battery capacity setting will affect the maximum charging current, for example, set 100Ah, the maximum charging current is $100A \times 0.2 = 20A$

8.2.5.2 BAT-COMM

Interface	Description
BAT-COMM 1.RS485 → 2.CAN	This interface is used to select battery communication BMS type. Press Up/Down button to move corresponding options; Press Enter button to enter the selected menu. The default option is CAN.

8.2.6 Grid standard

8.2.6.1 Grid standard

Interface	Description																						
GRID STD 1.AU 2.AU-W 3.NZ 4.UK 5.VDE 6.KR 7.PHI 8.CN → 9.US-CA 10.JP 11.CUSTOM	This interface is used to select Grid standard. Press Up/Down button to move corresponding options; Press Enter button to enter the selected menu. <table> <tr> <td>1:AU-(Australia):</td><td>240V/415V/50Hz</td></tr> <tr> <td>2:AU-W(Western Australia):</td><td>240V/415V/50Hz</td></tr> <tr> <td>3:NZ- New Zealand :</td><td>240V/415V /50Hz</td></tr> <tr> <td>4:UK-United Kingdom</td><td>230V/50HZ</td></tr> <tr> <td>5:PK-</td><td>230V/50HZ</td></tr> <tr> <td>6:KR-Korea:</td><td>220V/380V/60Hz</td></tr> <tr> <td>7:PHI-Philippines:</td><td>110V/220V/60HZ</td></tr> <tr> <td>8:CN-China:</td><td>220V/380V/50HZ</td></tr> <tr> <td>9:US-CA—America:</td><td>120V/240V 208V/240V/60Hz</td></tr> <tr> <td>10:THAIL</td><td>220/380V/50HZ</td></tr> <tr> <td>11:ZA</td><td>230/50HZ</td></tr> </table>	1:AU-(Australia):	240V/415V/50Hz	2:AU-W(Western Australia):	240V/415V/50Hz	3:NZ- New Zealand :	240V/415V /50Hz	4:UK-United Kingdom	230V/50HZ	5:PK-	230V/50HZ	6:KR-Korea:	220V/380V/60Hz	7:PHI-Philippines:	110V/220V/60HZ	8:CN-China:	220V/380V/50HZ	9:US-CA—America:	120V/240V 208V/240V/60Hz	10:THAIL	220/380V/50HZ	11:ZA	230/50HZ
1:AU-(Australia):	240V/415V/50Hz																						
2:AU-W(Western Australia):	240V/415V/50Hz																						
3:NZ- New Zealand :	240V/415V /50Hz																						
4:UK-United Kingdom	230V/50HZ																						
5:PK-	230V/50HZ																						
6:KR-Korea:	220V/380V/60Hz																						
7:PHI-Philippines:	110V/220V/60HZ																						
8:CN-China:	220V/380V/50HZ																						
9:US-CA—America:	120V/240V 208V/240V/60Hz																						
10:THAIL	220/380V/50HZ																						
11:ZA	230/50HZ																						

Fault diagnosis and solutions

	12:CUSTOM-User defined
	13:POL 230V/380V/50HZ
	14:EN50549 217V/220V/240V 380V/400V 50HZ/60HZ
	15:VDE4105—Germany: 230V/380V/50Hz
	If the country used is not one of the above options, consult the distributor.

8.2.7 RUN SETTING

8.2.7.0 RUN SETTING

Interface	Description
RUN SETTING 1.REACT MODE →2.GRID POWER 3.DISC POWER 4.PV POWER 5.VAC-MIN 6.VAC-MAX 7.FAC-MIN 8.FAC-MAX 9.ACTIVE REP.	This interface is used to select run setting. Press Up/Down button to move corresponding options; Press Enter button to enter the selected menu. Factory default Settings. Please consult the distributor for modification

8.2.7.1 REACT MODE

Interface	Description
RUN SETTING →1.REACT MODE 2.GRID POWER 3.DISC POWER	This interface is used to select react mode. Press Up/Down button to move corresponding options; Press Enter button to enter the selected menu.
REACT MODE →1.POWER FACTOR 2.REACT POWER 3.QU WAVE 4.QP WAVE	QU WAVE (Reserved) QP WAVE (Reserved)
POWER FACTOR INPUT: C1.00	The input value should range between L0.80 and L0.99 or C0.8 and C1.00.

Fault diagnosis and solutions

<div> <div>REACT POWER</div> <div>INPUT: +00%</div> </div>	The input value should range between -60% and +60%, which varies with the standard.
--	---

8.2.7.2 GRID POWER

Interface	Description
<div> <div>GRID PERCENT</div> <div>INPUT: 100%</div> </div>	The input value is power percent of grid.

8.2.7.3 DISCHARGE POWER

Interface	Description
<div> <div>DISC PERCENT</div> <div>INPUT: 100%</div> </div>	The input value is power percent of battery discharge.

8.2.7.4 PV POWER

Interface	Description
<div> <div>PV PERCENT</div> <div>INPUT: 100%</div> </div>	The input value is power percent of PV.

8.2.7.5 VAC-MIN

Interface	Description
<div> <div>GRID VOLT LOW</div> <div>INPUT: 150</div> <div>UNIT: V</div> </div>	<p>The input value of Grid low voltage.</p> <p>(This is valid only if the grid standard is "custom")</p>

Fault diagnosis and solutions

8.2.7.6 VAC-MAX

Interface	Description
<div>GRID VOLT HIGH INPUT: 280 UNIT: V</div>	The input value of Grid high voltage. (This is valid only if the grid standard is "custom")

8.2.7.7 FAC-MIN

Interface	Description
<div>GRID FREQ LOW INPUT: 57.0 UNIT: Hz</div>	The input value of Grid low frequency. (This is valid only if the grid standard is "custom")

8.2.7.8 FAC-MAX

Interface	Description
<div>GRID FREQ HIGH INPUT: 63.0 UNIT: Hz</div>	The input value of Grid high frequency. (This is valid only if the grid standard is "custom")

8.2.7.9 ACTIVE REF.

Interface	Description
<div>ACTIVE Type 1.PWR-VOLT RES →2.PWR-FREQ RES 3.PFC-VOLT RES 4.PFC-FREQ RES 5.Reserved1 6.Reserved2 7.Reserved3 8.Reserved4</div>	Custom function, default is allowed, do not need to set, customers need to consult the distributor.

8.2.8 485 Address

8.2.8.0 485 Address

Interface	Description
<div>485 ADDRESS INPUT: 1</div>	This interface is used to select 485 address.

8.2.9 RS485 BAUD RATE

8.2.9.0 BAUD RATE

Interface	Description
<div>SELECT → 1.2400 bps 2.4800 bps 3.9600 bps</div>	This interface is used to select baud rate.

8.2.10 LANGUAGE

8.2.10.0 LANGUAGE

Interface	Description
<div>LANGUAGE 1.Chinese → 2.English</div>	This interface is used to select language.

8.2.11 BACKLIGHT

8.2.11.0 BACKLIGHT

Interface	Description
<div> LIGHT TIME INPUT: 20 UNIT: SEC </div>	This screen is used to set the screen light time.

8.2.12 DATE/TIME

8.2.12.0 DATE/TIME

Interface	Description
<div> DATE/TIME DATE: 2021-12-25 TIME: 22:30:00 WEEK: Saturday </div>	This interface is used to set date and time.

8.2.13 CLEAR REC

8.2.13.0 Clear history

Interface	Description
<div> DEL REC →1.CANCEL 2.CONFIRM </div>	This interface is used to clear operation history.

8.2.14 PASSWORD

8.2.14.0 PASSWORD

Interface	Description
<div> PASSWORD OLD: XXXXX NEW: XXXXX CONFIRM: XXXXX </div>	This interface is used to set password.

8.2.15 MAINTENANCE

8.2.15.0 MAINTENANCE

Interface	Description
<div> <div>PASSWORD</div> <div>INPUT: XXXXX</div> </div>	Reserved

8.2.16 FCTRY RESET

8.2.16.0 FACTORY RESET

Interface	Description
<div> <div>FACTORY RESET</div> <div>→1.CANCEL</div> <div>2.CONFIRM</div> </div>	This interface is used to reset the inverter.

8.3 INQUIRE

8.3.0 INQUIRE

Interface	Description
<div> <div>INQUIRE</div> <div>→1.INV MODULE</div> <div>2.MODULE SN</div> <div>3.FIRMWARE</div> <div>4.RECORD</div> <div>5.DIAGNOSE</div> </div>	<p>Press Up/Down button to move corresponding options;</p> <p>Press Enter button to jump to the selected menu.</p> <p>Press ESC button to return to other interface.</p>

8.3.1 INV MODULE

Interface	Description
<div> <div>MODEL</div> <div>12K</div> </div>	This interface show inverter model.

Fault diagnosis and solutions

8.3.2 MODULE SN

Interface	Description
<div>S / N GUID: XXXXXXXX XXXXXXXXXXXXXXXX SN:XXXXXXXXXXXX</div>	This interface show module SN.

8.3.3 FIRMWARE

Interface	Description
<div>FIRMWARE ARM: V1.XX.XX DSP: V1.XX.XX</div>	This interface show Software version.

8.3.4 RUNNING RECORDS

Interface	Description
<div>REC(01) 02:Batdisconnect UP: 12-25 23:00 DOWN:</div>	This interface show running recorders.

8.3.5 DIAGNOSE

Interface	Description
<div>DIAGNOSE 000000 000000 000000 000000 000000 000000</div>	Factory internal us

8.4 STATISTIC

8.4.0 STATISTIC

Interface	Description
STAT. → 1.TIME STAT. 2.CONNE.TIMES 3.PEAK POWER 4.E-TODAY 5.E-MONTH 6.E-YEAR 7.E-TOTAL	This interface show inverter operation statistic. 1. Inverter operation and Grid-connection time statistic. 2. Inverter Grid-connection times statistic. 3. Displays power peak in history and for the day. 4. Displays statistic for the day (KWH). 5. Displays statistic for the month (KWH). 6. Displays statistic for the year (KWH). 7. Displays statistic of the inverter (KWH).

Note: 1. E-TODAY/MONTH/YEAR/TOTAL→INPUT→PV/GRID(Consume)/BATD(Battery discharge)

→OUTPUT→BatC(Battery charge)/GRID(Generation)/

CNSUM(Load consume)

2. If the inverter shut down before 24:00 on that day, and the day statistic will not be stored.

9. Fault diagnosis and solutions

When you encounter the following problems, please refer to the Solutions below, and contact the local distributor if the problem remains unsolved. The following table lists some of the basic problems that may occur during the actual operation as well as their corresponding basic solutions.

Fault diagnosis table

Content	Codes	Explanation	Solutions
DischgOverCur	00	Battery discharge over current. When the battery is loaded, the load is too large.	<ol style="list-style-type: none"> (1) Nothing need to do, Wait one minute for the inverter to restart. (2) Check whether the load is in compliance with the specification. (3) Cut off all the power and shut down all the inverter; disconnect the load and plug in to restart inverter, then check
Over Load	01	The load power is greater than other power(PV,BAT).	<ol style="list-style-type: none"> (1) Check whether the load is in compliance with the maximum power of the inverter. (2) Cut off all the power and shut down all the inverter; disconnect the load and plug in to restart inverter, then check whether the load is short circuited if the fault has been eliminated. (3) Contact customer service if error warning continues.
BatDisconnect	02	Battery Disconnect. (Battery voltage not identified)	<ol style="list-style-type: none"> (1) Check whether the battery is connected. (2) Check if battery wiring port is open circuited. (3) Contact customer service if error warning continues.
Bat Under Vol	03	Battery voltage lower than normal range.	<ol style="list-style-type: none"> (1) Checking System Settings, If so, power off and restart. (2) Check if the grid power down. If so, waiting for the grid power up, the inverter will automatically charge. (3) Contact customer service if error warning continues.
Bat Low capacity	04	Bat Low capacity	<ol style="list-style-type: none"> (1) Battery Low that setting capacity.(SOC<100%-DOD)
Bat Over Vol	05	The battery voltage is over than the Inverter maximum voltage.	<ol style="list-style-type: none"> (1) Checking System Settings, If so, power off and restart. (2) Contact customer service if error warning continues.

Fault diagnosis and solutions

Gird low vol	06	Grid voltage is abnormal	(1) Check if the grid is abnormal. (2) Restart the inverter and wait until it functions normally. (3) Contact customer service if error warning continues.
Grid over vol	07		
Grid low freq	08	Grid Frequency is abnormal.	(1) Check if the grid is abnormal. (2) Restart the inverter and wait until it functions normally. (3) Contact customer service if error warning continues.
Grid overFreq	09		
Gfci over	10	Inverter GFCI exceeds standard.	(1) Check PV string for direct or indirect grounding phenomenon. (2) Check peripherals of inverter for current leakage. (3) Contact the local inverter customer service if fault remains unremoved.
Bus under vol	13	BUS voltage is lower than normal.	(1) Check the input mode setting is correct. (2) Restart the inverter and wait until it functions normally. (3) Contact customer service if error warning continues.
Bus over vol	14	BUS voltage is over maximum value..	(1) Check the input mode setting is correct. (2) Restart the inverter and wait until it functions normally.
Inv over cur	15	The inverter current exceeds the normal value.	(1) Restart the inverter and wait until it functions normally.
Chg over cur	16	Battery charge current over than the Inverter maximum voltage.	(1) Restart the inverter and wait until it functions normally.
Inv under vol	18	INV voltage is abnormal	(1) Check if the INV voltage is abnormal. (2) Restart the inverter and wait until it functions normally. (3) Contact customer service if error warning continues.
Inv over vol	19		
InvFreqAbnor	20	INV frequency is abnormal	(1) Check if the INV frequency is abnormal. (2) Restart the inverter and wait until it functions normally. (3) Contact customer service if error warning continues.
Igbt temp high	21	The inverter temperature is higher than the allowed value	(1) Cut off all the power of the inverter and wait one hour, then turn on the power of the inverter.

Fault diagnosis and solutions

Bat over temp	23	Battery temperature is higher than the allowed value.	(1) Disconnect the battery and reconnect it after an hour.
Bat UnderTemp	24	Battery temperature is lower than the allowed value.	(1) Check the ambient temperature near the battery to see if it meets the specifications.
BMS comm.fail	27	Communication between lithium battery and inverter is abnormal.	(1) Check the cable, crystal, Line sequence. (2) Checking the Battery switch.
Fan fail	28	Fan fail	(1) Check whether the Inverter temperature is abnormal. (2) Check whether the fan runs properly.(If you can see it)
Grid Phase error	30	The power grid phase sequence is incorrectly connected.	(1) Check power grid wiring
Arc Fault	31	PV Arc Fault	(1) Check Photovoltaic panels, PV wire. (2) Contact customer service if error warning continues.
Bus soft fail	32	The inverter may be damaged	(1) Restart the inverter and wait until it functions normally. (2) Contact customer service if error warning continues.
Inv soft fail	33		
Bus short	34		
Inv short	35		
Fan fault	36	Fan fault.	(1) Check whether the Inverter temperature is abnormal. (2) Check whether the fan runs properly.(If you can see it)
PV iso low	37	PV Low insulation impedance.	(1) Check if the PE line is connected to the inverter and is connected to the ground. (2) Contact customer service if error warning continues.
Bus Relay Fault	38	The inverter may be damaged.	(1) Restart the inverter and wait until it functions normally. (2) Contact customer service if error warning continues.
Grid Relay Fault	39		
EPS rly fault	40		
Gfci fault	41		
Selftest fail	44		
System fault	45		
Current DCover	46		
Voltage DCover	47		

Note: If an error occurs that is not listed in the table, Please Contact customer service.